

Contents

Acknowledgments	12
Introduction	13
Chapter 1: Preliminary Setup	17
Setting Up the Camera	17
Charging and Inserting the Battery	17
Inserting the Memory Card	20
Introduction to Main Controls	25
Top of Camera	26
Back of Camera	26
Front and Sides of Camera	27
Setting the Language, Date, and Time	28
Chapter 2: Basic Operations	31
Taking Pictures	31
Fully Automatic—Auto Mode	31
Basic Variations from Fully Automatic	34
Focus	35
Manual Focus	38
Exposure	39
Exposure Compensation	39
Flash	42
Motion Picture Recording	44
Viewing Pictures	46
Review While in Shooting Mode	47
Reviewing Images in Playback Mode	47
Playing Movies	48
Chapter 3: The Shooting Modes	50
Auto Mode	50
Program Mode	51
Shutter Priority Mode	53
Aperture Priority Mode	59
Manual Exposure Mode	64
Scene Modes	66
Night Landscape	69
Landscape	71
Backlighting/HDR	72
The SCENE Setting on the Mode Dial	77
Portrait	79
Sports	79
Night Portrait	80
Party/Indoor	80
Beach	81
Snow	82
Sunset	83
Dusk/Dawn	83
Close-up	84
Food	86

Museum	87
Fireworks Show	88
Black and White Copy	88
Panorama	89
Easy Panorama	89
Panorama Assist	91
Pet Portrait	93
3D Photography	94
Special Effects Mode	97
Soft	99
Nostalgic Sepia	99
High-contrast Monochrome	100
High Key	100
Low Key	101
Painting	103
High ISO Monochrome	104
Silhouette	105
User Setting Mode	106
Chapter 4: The Shooting Menu	109
Image Quality	114
Image Size	115
Picture Control	119
Standard	119
Neutral	119
Vivid	120
Monochrome	121
Adjustments to Picture Control Settings	122
Custom Picture Control	125
White Balance	126
Metering	132
Continuous shooting	134
ISO Sensitivity	142
Minimum Shutter Speed	144
Exposure Bracketing	146
AF Area Mode	147
Face Priority	147
Auto	148
Manual	149
Center	150
Subject Tracking	151
Target Finding AF	152
Autofocus Mode	152
Flash Exposure Compensation	153
Noise Reduction Filter	154
Active D-Lighting	155
Save User Settings	157
Reset User Settings	157
Zoom Memory and Startup Zoom Position	157
Chapter 5: Other Controls	161
Power Switch	162
Shutter Release Button	162

Mode Dial	162
Zoom Lever	163
Function Button	164
Flash Pop-up Button	166
Side Zoom Control	167
AF Assist/Self-timer Lamp	168
Playback Button	169
Monitor Button	170
Diopter Adjustment Wheel	171
Display Button	171
Movie Button	173
Flash/Charging Lamp	173
Command Dial	173
Menu Button	175
Trash Button	175
Multi Selector and its Buttons and Dial	177
Multi Selector Dial	177
OK Button	178
Direction Buttons	178
USB and HDMI Ports	183
Tilting LCD Screen	184
Chapter 6: Playback	186
Normal Playback	186
Index View and Enlarging Images	187
Calendar View	189
Different Playback Screens	190
Viewing Shots Taken in a Sequence	193
The Playback Menu	196
Quick Retouch	196
D-Lighting	198
Skin Softening	198
Filter Effects	199
Print Order	202
Slide Show	203
Protect	205
Rotate Image	206
Small Picture	207
Voice Memo	208
Copy	209
Black Border	210
Sequence Display Options	211
Choose Key Picture	212
Printing Images	213
Printing Directly from the Camera	214
Chapter 7: Setup and GPS Menus	216
The Setup Menu	216
Welcome Screen	217
Time Zone and Date	218
Monitor Settings	219
Print Date	222
Vibration Reduction	223

Motion Detection	224
AF Assist	225
Assign Side Zoom Control	229
Sound Settings	230
Auto Off	231
Format Card/Format Memory	232
Language	233
TV Settings	233
Fn Button	234
Charge by Computert	235
Toggle Av/Tv Selection	235
Reset File Numbering	236
Blink Warning	237
Filmstrip	237
Eye-Fi Upload	238
Reverse Indicators	239
Reset All	239
Firmware Version	240
GPS Options Menu	241
GPS Options	242
Record GPS Data	242
Synchronize	243
Update A-GPS File	244
Create Log	244
View Log	244
Viewing GPS Location Screen	245
Chapter 8: Motion Pictures	246
Movie-making Overview	246
Quick Guide to Recording a Movie Clip	247
Other Settings for Movies	249
Still Photo Settings Available for Movies	249
Focus Mode	249
Exposure Compensation and Exposure Lock	250
Self-timer	251
Picture Control	252
White Balance	252
Metering	253
Vibration Reduction	253
Zoom	253
Shutter Release Button: Does Not Operate	254
Fn Button: Does Not Operate	254
Settings That Are Not Adjustable for Video Recording	255
The Movie Menu	255
Movie Options	255
HS Movie Options	258
Autofocus Mode	261
Movie Playback and Editing	263
Playback	263
Editing	265
Chapter 9: Other Topics	269
Using the Superzoom Lens	269

Macro (Close-up) Shooting	279
Using Flash	283
Infrared Photography	290
Street Photography	292
Connecting to a Television Set	297
APPENDIX A: Accessories	299
Cases	299
Batteries	301
AC Adapter	302
Add-on Filters and Lenses	304
External Flash	306
APPENDIX B: Quick Tips	309
APPENDIX C: Resources for Further Information	314
Photography Books	314
Web Sites	314
Digital Photography Review	315
Reviews of the Coolpix P510	315
Flickr Discussion Group	316
Infrared Photography	316
Index	317