

# Index

## Symbols

- 1-Area autofocus mode 40
- 1 Shot AF option 46, 240, 300
- 1st-curtain flash 190–192
- 2d-curtain flash 190–193
- 3D image
  - converting for viewing with 3D glasses 111–112
- 3D Playback menu option 320

## A

### AC adapter

- Panasonic model no. DMW-AC5 379–380
- using for long video recordings 346

### Adobe Bridge software 324

### Adobe Camera RAW software 354

### Adobe Lightroom software 324

### Adobe Photoshop software 249, 354

### Adobe Premiere Elements software 334, 354

### Adobe Premiere Pro software 346

### AF/AE Lock button 172–173, 224

- limitations on using 173
- using with AF Tracking 167, 224

### AF/AE Lock menu option 172–173

### AF assist lamp

- behavior with self-timer 252–253

### AF Assist Lamp menu option 188–189

### AF (Autofocus) Mode menu option 163–171

- AF Tracking menu option 70–71, 109, 166–167, 224
- availability with certain shooting modes 167

### Anabuilder software 112

### Aperture

- advantages of controlling 81–83
- relationship to depth of field 82
- relationship to zoom level 85–86, 87, 93, 208
- selecting intermediate values 208

- steps for setting 84–85
- Aperture number on display screen
  - meaning of red number 86, 89
- Aperture Priority shooting mode 81–85
- Aperture ring 84, 208
  - setting to intermediate aperture values 208
  - using in Manual exposure mode 93
- Aspect Bracket menu option 198–199
  - incompatibility with other settings 199
- Aspect ratio 205–207
  - loss of pixels with various settings 145
  - relationship to picture size 145
  - selecting 34, 62
- Aspect ratio switch 205–207
  - using 34
- Astrophotography 361–364
  - settings for 364
- Audio-video cable
  - Panasonic model no. DMW-AVC1 374
  - using to connect LX7 camera to TV set 374–375
- Auto Bracket option 249–250
  - incompatibility with certain settings 250
  - using for HDR images 249
- Autofocus
  - forcing use in manual focus mode 240
  - signals upon achieving focus 41
  - tracking moving subjects 70–71
- Autofocus assist lamp 188–189
- Autofocus Macro setting 209, 350
- Autofocus mode
  - 1-Area 40, 169–171
    - changing size of focus frame 170
    - moving the focus frame 169
  - 23-Area 167–169
- AF Tracking 166–167
  - availability with certain shooting modes 167
  - reasons for using 167–168
- Face Detection 164–166
  - availability with various shooting modes 165–166
  - selecting 39

- Auto LCD Off menu option 314
- Auto Power LCD option 302
- Auto Retouch option 285–286
- Auto Review menu option 315–316
- AVCHD video format 51, 339

## B

- Background
  - using aperture setting to blur 83
- Background defocus feature 72
- Backlight compensation 64
- Battery
  - charging 19
  - inserting into camera 20
  - inserting into charger 19
  - Panasonic DMW-BCJ-13PP 18, 379
- Beep menu option 292
  - limited choices in Intelligent Auto mode 293
- Bit rate 340
- Blank LCD screen
  - with Optional Viewfinder menu option 254
- Blurred background 83
- Bokeh effect 72, 84
- Brightness
  - adjusting in Intelligent Auto Plus mode 75
- Burst shooting 242–249
  - 2 frames per second 245
  - 2 frames per second with autofocus 245
  - 5 frames per second 245–246
  - 5 frames per second with autofocus 246
  - 11 frames per second 246
  - 40 frames per second 246
    - viewing images 226, 246–247, 288
  - 60 frames per second 247–248
  - advantages of 242
  - and RAW quality 243
  - availability with various shooting modes 242
  - during video recording 347
  - icon indicating writing to memory 248–249
  - with flash 248

## C

- C1 and C2 shooting modes 129, 294–298
- Cable release adapter 393–394
  - Hama Cable Release for Digital Cameras 393
  - Kaiser Strap-On Cable Release Adapter 394
- Calendar view of images 56, 261
  - as playback mode 268–269
- Cases 376–377
  - Kata model no. DW-491 378
  - Loweprro Rezo 60 378
  - Panasonic model no. DMW-CLX7 376
  - Tamrac model no. 5692 377
- Clock Set menu option 204, 290
- Color
  - adjusting in Intelligent Auto Plus mode 75
- Color Mode menu option 66, 134
- Color temperature
  - using to set white balance 229–231
- Compression of images 151
- Continuous AF menu option 337, 342
- Continuous shooting 75, 241–250
- Contrast
  - adjusting with Photo Style menu option 135–136
- Copy menu option 283–284
- Creative Control shooting mode 113–129
  - adjustments using 3 icons on screen 115–116
  - charts with sample images 116–118
  - compared to Photo Style menu option 136–137
  - effect of using RAW quality 114
  - general nature of 113
  - precaution to avoid shooting video with unwanted setting 114
  - settings
    - Cross Process 122
    - Dynamic Monochrome 120
    - Expressive 119
    - High Dynamic 121–122, 371
    - High Key 119–120
    - Impressive Art 121
    - Low Key 120

- Miniature Effect 124–126
- One Point Color 127–128
- Radial Defocus 129
- Retro 119
- Sepia 120
- Smooth Defocue 128
- Soft Focus 126
- Star Filter 126
- Toy Camera 123
  - settings available or unavailable with 115
- Creative Retouch option 287
- Creative Video mode 332–336, 343, 348
  - range of shutter speeds available 333
  - selecting an exposure mode 332
- Cropping menu option 278
- Cursor buttons
  - down button
    - functions of 253
  - left button
    - general functions of 241
  - right button
    - functions of 238
  - up button 225–226
    - using for retouch functions 226
    - using to play movie 225
- Custom Set Memory menu option 129, 294–298, 344
  - table of settings that can be saved 296
- Custom shooting modes 129

## D

- Date and time
  - displaying with Display button 257
  - setting 31, 290
- Date Stamp menu option 202–203
- DC Coupler 346
  - Panasonic model no. DMW-DCC7 379
- Deleting images 222–223
- Demo Mode menu option 327
- Depth of field
  - relationship to aperture 82

- Digiscoping 361, 364
- Digital Zoom 149–150, 185
- Display button 253–257
  - general functions of 256–257
  - using for information about scene types 97, 256
  - using to display date and time 257
  - using to switch character display for text entry 272
- Display screens 253–256
  - in Intelligent Auto and Creative Video modes 255
- DOF (Digital Print Order Format) 281–282

## E

- Economy menu option 212, 313–314
- Electronic viewfinder
  - Panasonic DMW-LVF2 197, 303, 315, 382
- Enlarging image 56, 261
  - centered on focus point 262
- EV (exposure value) 47
- Exposure compensation 46–47
  - need to reset to zero when done 48
  - scale on display 47
- Exposure Meter menu option 84, 310
- Extended ISO menu option 157–158
- Extended Optical Zoom 146–149
  - relationship to picture size 146–149
- Eye-fi card 25

## F

- Facebook
  - uploading images and videos to 271–272
- Face Recognition Edit menu option 283
- Face Recognition menu option 69, 161–163
- Favorite menu option 280–281
- Favorites
  - images marked as 223
  - selecting for slide show 266
- FHD setting 341
- File types
  - .mpo 112
- Filter adapter

- Panasonic model no. DMW-FA1 359, 362, 385
  - type that attaches by bayonet mechanism 387
- Filters
  - attaching to LX7 camera 386
- Firmware
  - upgrading from current version 325
- Fish-eye lens
  - attaching to LX7 camera 388
- Five-button array 225–253
- Flash
  - using 49–50
    - in Intelligent Auto shooting mode 355
    - in Scene mode 355
  - with burst shooting 248
- Flash Adjustment menu option 193–194
  - using with external flash 194
- Flash, built-in
  - popping up 36, 49, 210
- Flash, external 389–392
  - effect on available flash modes 190
  - Metz Mecablitz model no. 36 AF-4 390, 391
  - Olympus model no. FL-36R 390
  - Panasonic model no. DMW-FL220 389
  - Panasonic model no. DMW-FL360 390
  - using wireless trigger 391
- Flash mode 51, 189–190
  - Forced On 356
  - selecting 355–358
  - Slow Sync with Red-eye Reduction 356–358
- Flash open switch 210
- Flash Synchro menu option 190–193
  - availability with various shooting modes 193
- Fluorescent lights
  - setting white balance for 235
- Fn Button Set menu option 298–301
- Focal length of lens 147–148
  - 35mm-equivalent value 147
- Focus
  - locking 42
  - selecting an autofocus mode 39

- Focus Area Set option 239–240, 299
- Focus frame
  - moving 40, 169–171, 171, 239–240
- Focus switch 35, 209
- Format menu option 325
- Formatting built-in memory 326
- FSH setting 340
- Function (Fn) button 238–241
  - assigning 1 Shot AF option to 46, 240, 300
  - assigning Focus Area Set option to 171, 239–240, 299
  - assigning Level Gauge option to 240–241
  - default function 238
  - functions that can be assigned to 238–239, 298–301

## **G**

- Guide Line menu option 255, 304

## **H**

- Happy menu option setting 67
- HDMI cable
  - using to connect camera to TV set 31, 373
- HDMI port 30
- HDR (High Dynamic Range) photography 69, 106, 368–372
  - in general 368
  - using special software 372
- HD setting 341
- Highlight menu option 310
- High Speed video recording 335
- Histogram 306–308
  - explanation and examples 306–307
  - not available in some shooting modes 255, 306
- Hoodman Hoodloupe 3.0 384

## **I**

- Icon
  - indicating flash mode 49
  - indicating recording to internal memory 26
  - indicating recording to SD card 26
- iHandheld Nite Shot menu option 68



- iHDR menu option 68, 370
- Image
  - enlarging on screen 56
- Image numbers 317
- Indicator light 197, 212, 257
- Infrared filter
  - Hoya model No. R72 360
- Infrared photography 358–361
  - problem of hot spots 361
  - settings for 360
- Intelligent Auto Plus mode 73–74
- Intelligent Auto shooting mode 35, 62–68
  - ability to use RAW format with 63
  - icon for 62
  - limitations on settings with 63, 77
  - Recording menu settings available with 65
- Intelligent Dynamic setting 177–178
- Intelligent ISO setting 155
- Intelligent Resolution setting 183–184
- Intelligent Zoom 184–185
  - compatibility with other settings 185
  - relationship to Motion Deblur 67
- Interlaced video format 340
- Internal memory 21
  - copying images to or from 283–284
  - formatting 326
- ISO 152–155
  - Auto ISO setting 155
  - availability of setting with various shooting modes 154
  - available numerical values 154
  - effects of setting on images 153
  - high settings
    - effect on image quality 158–159
    - effect on image size 154, 157
    - incompatibility with burst shooting with flash 154, 158
    - incompatibility with RAW quality 154, 158
  - how to set 152, 154–155, 225–226
  - Intelligent ISO setting 155
  - reasons for using numerical values 155
- ISO Increments menu option 156–157

- ISO Limit menu option
  - incompatibility with numerical ISO value 155
- ISO Limit Set menu option 155

## **J**

- JPEG image format 79, 151–152
  - size of image files 151

## **K**

- Kelvins 226–227

## **L**

- Language
  - setting 33, 326
- Language menu option 326
- LCD Display menu option 301
- LCD display screen
  - adjusting brightness and colors 301
  - turning off 197
- LCD Display Style menu option 304
- LCD Mode menu option 302
- Leica D-Lux 6
  - similarity to Lumix LX7 16
- Lens cap
  - automatic 18, 395
  - error message for failure to remove 316
  - problem of dangling 18
- Lens cap string
  - attaching to camera 17
- Lens Resume menu option 311
- Level Gauge option
  - assigning to Function button 240–241
- Leveling menu option 279
- Live View Mode menu option 314
- LVF Display Style menu option 303

## **M**

- Macro focus range 209, 350
- Macro photography 349–352

- using flash 351
- Manual exposure shooting mode 92–93
  - display of normal exposure 93
  - reasons for using 92
  - steps for using 92–94
  - using for HDR photography 92
- Manual focus 43–44
  - adjusting in autofocus mode 214–215, 224
  - adjusting with cursor buttons 45, 214
  - enlarged image to assist with 44, 311
  - focusing scale 44
  - reasons for using 43
  - using for macro shooting 351
- Manual Focus Resume menu option 311
- Megapixels (MP) 145–146
- Memory card
  - choosing type to use 21–24
  - inserting into camera 26
  - storage capacities of different sizes 22
  - varieties of 22
  - wireless types 25
- Menu Resume menu option 323
- Menu/Set button
  - functions of 253
- Metering Mode menu option 173–177
  - availability with various shooting modes 176
  - Center-weighted 173
  - how to set 174
  - Multiple 173
  - Spot 173–174
    - how to use 175–176
    - moving spot around screen 176
- MF Assist menu option 44, 311–312
  - moving area to be enlarged 45, 214, 313
- Microphone
  - location of 28
- Minimum Shutter Speed menu option 182–183
  - always active in Program mode 80
- Mode dial 210–211
- Monochrome setting for Photo Style 136

- Motion Deblur menu option 67
- Motion Picture menu 338–345
  - AF/AE Lock 342
  - AF Assist Lamp 344
  - Continuous AF 342
  - Digital Zoom 344
  - Exposure Mode 343
  - Intelligent Dynamic 343
  - Intelligent Resolution 343
  - Intelligent Zoom 343
  - ISO Increments 342
  - ISO Limit Set 341
  - Metering Mode 342
  - Photo Style 338
  - Recording Mode 339
  - Recording Quality 340–341
  - Stabilizer 344
  - Wind Cut menu option 344
- Motion picture recording. *See* Video recording
- Motion pictures
  - playback. *See* Videos: playback
- Movie button 52, 212, 329
- MP4 video format 51, 339
- Multiple Exposure menu option 178–181
  - Auto Gain setting 180
  - availability with various shooting modes 181

## N

- ND/Focus lever 214–216
  - using to activate ND filter 161, 215–216
  - using to adjust manual focus 43, 214, 300
  - using to enlarge image at focus point 216, 262
  - using to scroll through images 216
- ND (neutral density) filter 160–161, 215–216
  - compatibility with various shooting modes 216
- Noise reduction
  - adjusting with Photo Style menu option 135–136
- Number Reset menu option 317

**O**

Optical viewfinder

Panasonic DMW-VF1 197

Optional Viewfinder menu option 196–197, 254

**P**

Panasonic Lumix DMC-LX7

items shipping in box 17

lacking features 15

positive features 14

Panorama shots

playback 226, 288

PhotoAcute software 249

PHOTOfunSTUDIO software 273, 324

PhotoMatix software 249

Photo Style menu option 134–144

abridged version in Intelligent Auto mode 134

compared to Creative Control shooting mode 136–137

fine-tuning parameters 135–136

limitations 134

Photo Style settings

Custom 144

Monochrome 141

Natural 140

Portrait 143

Scenery 142

Standard 138

Vivid 139

PictBridge 319

Picture Size menu option 145–150

available with RAW + JPEG setting 146

in Intelligent Auto mode 65

relationship to aspect ratio 145

unavailable with RAW quality 146

Playback menu 270–287

Playback Mode menu 259–269

Playback of still images

automatic review in shooting mode 315–316

burst shots 246–247

- calendar display 261
- enlarging images 261
- Filtering Play option 267–268
- index views 55, 261–262
- navigating through images 54, 258
- Normal Play 260–262
- overview 54–56
- Play button 213–214
  - using to turn camera on in playback mode 213, 317
- Play on LCD menu option 315
- Power LCD option 302
- Power switch 212
- Print Set menu option 281–282
- Program Diagram menu option 159–161
- Program Shift 219–220
- Program shooting mode 38, 78–79
  - advantages of 79
  - drawbacks of 80
  - limitation on long shutter speeds 183
- Progressive video format 340
- Protected images
  - deleted by Format command 283
- Protect menu option 282
- PSH setting 340

## Q

- Quality menu option 79, 150–152
  - distinguished from Picture Size option 150–151
- Quick AF menu option 171–172
- Quick Menu (Q.Menu) button 220–222

## R

- RAW format 79
  - benefits of using 353
  - drawbacks of using 354
  - relationship to Photo Style setting 136
  - size of image files 151
- RAW + JPEG option 151–152
  - using with Creative Control shooting mode 152
- RAW option for Quality

- unavailable with 3D setting 152
- Rear dial 217–220
  - switching functions of 89–90
  - using for adjustments in Intelligent Auto Plus mode 74
  - using in Manual exposure mode 93
  - using to change size of focus frame 170
  - using to control exposure compensation 47, 217–218
  - using to set shutter speed 89–90, 217
- Recording menu
  - general attributes 130
  - grayed-out options 133
  - navigating in 131–132
  - using 39
- Red-eye Reduction flash setting 195, 357
- Red-eye Removal menu option 194–195
- Remaining Display menu option 309
- Reset menu option 318
- Resize menu option 276–277
- Retouch options 285–287
- Rotate Display menu option 321

## S

- Saturation
  - adjusting with Photo Style menu option 135–136
- Scene detection 63
- Scene menu 95–97
- Scene Menu menu option 322
- Scene shooting mode 94–112
  - getting information about scene types 97–115
  - limitations on settings with 97
  - selecting a scene type 95–97, 323
- Scene types
  - 3D 110–112
  - Baby 107
  - Glass Through 109
  - HDR 105, 371
  - Night Portrait 355
  - Panorama Shot
    - playback of panoramas 288
  - Pet 108–109

- Portrait 97–98
- Scenery 98–99
- settings available with (table) 112
- Soft Skin 98
- Sports 103
- Sunset 109
- SD card 22
- SDHC card 22
- SDXC card 22
  - incompatibility issues 24
- Sekonic Prodigy meter 230
- Self-timer 76, 250–253
  - icon displayed on screen 252
  - limited options in Intelligent Auto mode 251
  - options 251
  - setting for multiple shots 251
- Setup menu
  - in general 289–290
  - using 32
- Sharpness
  - adjusting with Photo Style menu option 135–136
- SH setting 340
  - ability to make long recording in United States 341
- Shutter button 211
  - using to control video recording 211, 335
- Shutter Priority shooting mode 87–90
  - steps for setting 88–89
- Shutter speed
  - availability of 250-second setting 183
  - range of available settings 86, 87, 90, 183
    - 250-second setting in Manual mode 94
    - effect of ISO on available settings 94–96
  - setting with rear dial 89
  - using to create light trails 88–89
  - using to stop action 87–88
- Shutter speed number on display screen
  - distinguishing full seconds from fractions 90
  - meaning of red number 86, 89
  - mixed fractional and decimal values 91
- Single-shooting option 243



- Sleep Mode menu option 212, 314
- Slide Show menu option 262–265
  - category selection 265–266
  - controls 264
  - sound options 264
- Slow-motion video 340
- Slow Sync flash mode 103
- Stabilizer menu option 187–188
- Starting camera in playback mode 316
- Start Mode menu option 316
- Status indicator (light) 257
- Step Zoom menu option 185–187
  - compatibility with other settings 187
  - disadvantage of 187
  - effect of 1:1 aspect ratio 186
  - using with optical viewfinder 382
- Stereo Photo Maker software 111
- Street photography 365–367
  - settings for 366–367

## T

- Telescope
  - Meade ETX-90/AT 362, 363–364
- Television set
  - connecting LX7 camera to 373–375
- Text Stamp menu option 273–274
- Thumbnail images
  - for various types of images 269
- Time and date
  - setting 31
- Time Lapse Shot menu option 70, 199–202
  - playback of Time Lapse images 288
- Title Edit menu option 272–273
- Title Edit option
  - displaying characters 256
- Trash button 222–223
  - using to delete images 222–223
- Travel Date menu option 292
- TV Aspect menu option 319

## U

- Upload Set menu option 271–272
- USB cable
  - using to connect camera to computer or printer 31
- USB Mode menu option 319
- USB port 30
- User's Name Recording menu option 324

## V

- Version Display menu option 325
- Video Divide menu option 274–276
- Video recording
  - adjusting exposure compensation 335
  - available settings for 336–338
  - choosing a shooting mode 330–335
  - controlling aperture 333
  - controlling aperture and shutter speed 333
  - controlling ISO 336
  - controlling shutter speed 333
  - creating in-camera fades 334
  - duration of recordings 341, 345–346
    - making long recordings with SH setting 345–346
  - incompatibility with panorama or 3D shooting 331
  - limitations on length 23
  - Low Light mode 331
  - Normal Motion Picture mode 331
  - no way to control volume of 53
  - overview 51–52
  - recommended settings 347–348
  - setting focus 336–337
  - setting slow shutter speed 334
  - shooting still images while recording video 211, 346–347
  - using manual focus 337
  - using Scene mode 331
  - using the ND Filter 338
  - zooming while recording 337
- Video Recording Area menu option 308
- Videos
  - editing in camera 274–276

- editing on computer 59
- playback 57–59, 288
  - controlling volume 58
  - saving single frame from 59
  - setting playback volume 293
- VIERA Link menu option 320
- Viewfinders 381–385
  - Clearviewer 385
  - Hoodman Hoodloupe 3.0 384
  - Panasonic model no. DMW-LVF2 382
  - Panasonic model no. DMW-VF1 381
  - reasons for using 383
  - Voigtlander 28mm 382
- Viewing images
  - overview 54–56
- Volume menu option 293

## W

- White balance 226–238
  - and RAW quality 233
  - available settings 227
  - chart of sample images 234
  - fine-tuning with color axes 232–233
  - in general 226–227
  - lack of setting for fluorescent lights 235
  - making custom setting 228–229
  - setting by color temperature 229–231
  - White Set options 228
- White balance bracketing 235–237
  - incompatibility with certain settings 237
- Wifi network
  - transferring images with 25
- Wireless flash trigger 391
- World Time menu option 290–291
- Wrist strap 18

## Y

- YouTube
  - uploading videos to 271–272

## **Z**

Zoom lever 211–212

    basic use of 37, 211–212

    using to enlarge images 212, 261

    using to navigate through menu screens 132, 212

Zoom Resume menu option 311