

# Index

## Symbols

4K Output Select menu item 182

4K video

in general 196

using as a type of continuous shooting 211

24p, 30p, 60p, and 120p video frame rates 196–197

24p/60p Output menu item 180

35mm-equivalent zoom range 117

60i video frame rates 198

## A

AC adapter

optional accessory 11, 157

Sony AC-PW20 233

Tether Tools Case Relay power adapter 233

Sony AC-UUD12 4, 232

Access lamp 11, 157

behavior during continuous shooting 49

Access Point Settings menu option 223

Adobe Camera Raw software 42, 91, 93

Adobe Photoshop software

using for HDR images 91

Adobe Premiere Pro software 210

AEL button 9, 148

options that can be assigned to 136

using to enlarge image in playback mode 9, 148

using to test Wireless Flash operation 148

AEL Hold option for control button 133

using during movie recording 207

AEL Toggle option for control button 133

using during movie recording 207

AEL w/Shutter menu item 69, 78–79, 145

using with continuous shooting 49, 79

AF Area Auto Clear menu item 71

AF Area Registration menu item 70

incompatibility with other settings 70

AF Drive Speed menu item 113, 155, 198

using to control speed of pull focus effect 198

AF Illuminator menu item 68, 157

AF Illuminator/Self-timer Lamp 10, 157

AF in Focus Magnifier menu option 107

AF/MF/AEL switch lever 9

AF/MF button 9, 148

options that can be assigned 128–136

using to enlarge image in playback mode 9, 159

AF/MF Control Hold option for control button 130

AF/MF Control Toggle option for control button 61–62, 130

AF/MF switch on lens 11, 60, 130

using during movie recording 206

AF Micro Adjustment menu item 71–72

available only with A-mount lenses 231

AF On option for control button 69, 132

AF Tracking Sensitivity menu item 113, 198–199

AF w/Shutter menu item 69, 132, 145

Airplane Mode menu item 215, 223

Animal Eye Display menu item 69

Animal eyes

setting for detecting and focusing on 68–69

Anker 40-watt desktop USB charger 233

Anti Motion Blur scene type setting 34

compared to Hand-held Twilight setting 34

Aperture

range of available settings

effect of focal length on 24–25

relationship to depth of field 23–24

Aperture Preview option for control button 135

Aperture Priority exposure mode for movies 194

Aperture Priority mode 23–25

Area Setting menu item 185–186

Aspect Ratio menu item 44–45

incompatibility with other settings 45

relationship to JPEG Image Size menu item 43–44

Astrophotography 227

Atomos Shogun video recorder 181

recording video to 209–210

Audio Level Display menu item 114, 200

Audio Recording Level menu item 113, 199–200

Audio Recording menu item 113, 199

Audio Signals menu item 144

Auto Area Adjustment menu option 224

Autoflash setting 16, 80

Auto ISO setting

setting minimum and maximum values for 74

using with Manual exposure mode 75, 245

using with Manual Exposure Mode setting for movies 245

Automatic AF setting 14, 59

Auto Mode menu item 15, 21, 47

Auto Object Framing menu item 110–111

incompatibility with other settings 111

Auto Power Off Temperature menu item 175

Auto Review menu item 18, 126–127

deleting an image in Auto Review 127

Auto Slow Shutter menu item 113, 199

works only when Auto ISO is in effect 199

Auto Time Correction menu option 224

Auto White Balance Lock Hold/Toggle options for control button 134  
 AVCHD format for movies 196  
 Av/Tv Rotate menu item 141

## B

Back button focus technique 69, 130, 132  
 Battery  
   charging 3–4  
     indicator light 4  
     time for full charge 4  
   generic replacement 232  
   Sony NP-FW50 3, 232  
 Battery charger  
   generic external charger 232  
   Sony AC-UUD12 4, 232  
   using as external power source 3–4, 232–233  
 Battery grip  
   Vello BG-S4 232  
 Battery/memory card compartment 11, 157  
 Bird photography 245  
 Bit rates of video formats 197–198  
 Black Gamma 103  
 Black Level 102  
 Blank screen  
   selecting for LCD monitor 121  
 Bluetooth Remote Control menu item 225, 239  
   incompatibility with other settings 180, 225  
 Bluetooth Settings menu item 220, 224, 225  
 Blurred background  
   how to achieve 24  
 Bokeh 24  
 Bracket Order menu option 53–54  
 Bracket Settings menu item 53–54  
 Bright Monitoring option for control button 135  
   incompatibility with other settings 135  
 Bulb setting for shutter speed 28  
   incompatibility with other settings 28  
 Burst shooting. See Continuous shooting option of Drive Mode

## C

Calendar display of images 19, 158–159  
 Camera Settings1 menu  
   effects of settings on recording movies 204–206  
 Cases for a6400 camera  
   Lowepro Apex 100 AW 232–231  
   Lowepro Apex 110 AW 231  
   Lowepro Passport Sling 231  
   Ruggard Hunter 25 Holster Bag 231  
 Center button 9, 152  
   assigning a function to 152  
   options that can be assigned to 136  
   using to adjust location of Flexible Spot focus frame 152  
   using to determine reason for setting conflict 244  
   using to magnify focus area 61, 152

using to mark or unmark images for Playback menu options 152–153, 162, 163, 164  
 using to play a panorama at larger size 36, 152  
 using to play a video 152  
 using to return enlarged image to normal size 19, 152–153, 159  
 Center option for Focus Area 64  
   distinguishing focus frame from Spot metering circle 77  
 Center option for Metering Mode 77  
 Checking focus in playback mode 159  
 Circulation of Focus Point menu item 71  
 Clean HDMI signal output 10, 156, 181, 228  
 Cleaning Mode menu item 175–176  
 Clear Image Zoom 117–119  
   incompatibility with other settings 119  
   using with Zoom menu item 116  
 Closeup (macro) photography 31–32  
 Color Depth 104  
 Color Mode 104  
 Color Phase 104  
 Color Space menu item 46  
 Color temperature  
   using to set white balance 86  
 Color temperatures of various light sources 85  
 Compression of JPEG files 43  
 Continuous AF setting 14, 59–60  
   only autofocus option available for recording movies 60  
   using with tracking focus 60  
 Continuous exposure bracketing setting of drive mode 51–52  
 Continuous Playback for Interval menu item 55, 166  
 Continuous shooting option of Drive Mode 17, 48–50, 243  
   displaying images taken in burst 50, 166, 169  
   icons showing emptying of buffer 49  
   incompatibility with other settings 50, 243  
   selecting speed of 48  
   using autoexposure with 49, 243  
   using autofocus with 49, 243  
   using with flash 16, 49  
 Contrast  
   adjusting 92  
 Control dial 8, 146  
   locking operation of 9, 143–144, 150  
   reversing functions of control wheel and 26, 141  
   using to control exposure compensation 141  
   using to move to other images at same magnification 159  
   using to navigate through menu screens 39, 243  
   using to select Scene mode settings 30, 47, 243  
   using to set aperture 24, 26  
   using to set panorama direction 35, 45, 243  
   using to set shutter speed 25  
 Control wheel 9, 151–152  
   assigning temporary function to 152  
   locking operation of 9, 143–144, 150  
   reversing functions of control dial and 26, 141, 152  
   using for Program Shift 9  
   using to adjust magnification in playback mode 159  
   using to control exposure compensation 141, 152

- using to set aperture 9, 24, 152
- using to set shutter speed 9, 25, 26, 152
- Control with Smartphone menu item 218, 223
  - interference with other settings 223, 244
- Copyright Info menu item 186
- Counter option for movie recording 178
- Creative Style comparison charts 93–94
- Creative Style menu item 91–95
  - adjusting contrast, saturation, and sharpness 92–93, 244
  - comparison of settings to Scene mode settings 95
  - incompatibility with other settings 93
  - saving custom settings 93
  - using with Raw images 93
- CTRL for HDMI menu item 181–182
- Custom Button 1 8, 146
  - options that can be assigned to 137
- Custom Button 2/Delete button 9, 151
  - assigning function to 151
  - options that can be assigned to 136
  - using for In-Camera Guide option 244
  - using to delete images or videos 151, 159, 161
  - using to return movable focus frame to center 151
- Custom Key menu options in general 8, 9, 244
- Custom Key (Movies) menu item 137–138, 202
  - lists of options that can be assigned to control buttons 137–138
- Custom Key (Playback) menu item 138–139, 150
- Custom Key (Still Images) menu item 127–137
  - list of items that can be assigned to a button 128–129
- Custom white balance
  - how to set 86–87

## D

- Date and Time
  - setting with Setup menu 6, 185
- Date format
  - selecting 185
- Date/Time Setup menu item 7, 185
- DaVinci Resolve software 245
- Day for night movie recording 195
- Daylight Savings Time adjustment 185, 186
- Delete Confirmation menu item 173–174
- Delete menu item 162–163
- Delete Registered AF Area menu item 71
- Deleting images 162–163
  - with C2/Delete button 161, 173–174
- Demo Mode menu item 177
- Depth of field
  - relationship to aperture setting 23–24
- Detail (Picture Profile parameter) 104
- Dial/Wheel EV Compensation menu option 8, 35, 141, 152
- Dial/Wheel Lock menu item 9, 143–144, 150
- Dial/Wheel Setup menu item 26, 141, 152
- Digiscoping 227
- Digital Zoom 117–119
  - incompatibility with other settings 119

- using with Zoom menu item 116
- Dimmed menu items 40
- Diopter adjustment wheel 8–9, 147
- Display as Group menu item 169
- Display button 9
  - using during movie recording 212
  - using to cycle through display screens 151, 153
- Display Button menu item 120–122
- Display Continuous AF Area menu item 71
- Display MAC Address menu item 223–224
- Display Media Information menu item 189
- Display Quality menu item 174
- Display Rotation menu item 169–170
- Display screens
  - playback mode 159–160
  - shooting mode
    - selecting with Display button menu item 120–122
- DMF (direct manual focus) 14, 60, 245
  - not available with all lenses for this camera 60, 245
  - requirement to hold shutter button down halfway with MF Assist 245
- Down button
  - options that can be assigned to 137
  - using to display index screen in playback mode 153
  - using to open movie playback control panel 153
- DPOF (Digital Print Order Format) 164–165
- Drive Mode menu 16–17, 48–53
- DRO/Auto HDR menu item 88–91
  - incompatibility with other settings 91
- DRO bracketing setting of drive mode 53
  - order not affected by Bracket Order menu setting 53
- Drop-frame time code
  - selecting 179

## E

- Edit Device Name menu item 224
- E-Front Curtain Shutter menu item 115
  - incompatibility with other settings 115
- Electronic viewfinder 8–9, 147
  - adjusting brightness of 172
  - adjusting color temperature 172
  - setting information display screens for 120
  - switching between EVF and LCD screen 9, 122, 147
- Enlarge Image menu item 19, 166
- Enlarge Initial Magnification menu item 166
- Enlarge Initial Position menu item 166
- Enlarging image by pressing AF/MF/AEL button 159
- Enlarging images by tapping touch screen 19, 155, 159
- Entire Screen Average option for Metering Mode 77
- Expand Flexible Spot option for Focus Area 65–66
- Exposure bracketing
  - continuous 51–52
  - incompatibility with other settings 53
  - order of bracketed exposures 52
    - changing 53–54
  - single 52

- using exposure compensation with 52
  - using flash with 52
  - using self-timer with 53
  - Exposure compensation 72–73
    - limited adjustment range for movies 73, 205, 206
    - setting adjustments for various shooting modes 79
    - unavailable in Auto and Scene modes 73
    - using with Manual exposure mode 27
    - using with Sweep Panorama mode 36
  - Exposure Compensation menu item 72–73
  - Exposure Compensation Setting menu item 83
  - Exposure Mode (Movies) menu item 112, 193–195
  - Exposure Mode (S&Q) menu item 112, 195
  - Exposure Settings Guide menu item 24, 25, 26, 125
  - Exposure Standard Adjustment menu item 79
  - Exposure Step menu item 24, 78
  - External flash units
    - Godox TT350 235
    - LumoPro LP180 235
    - Neewer NW320 235
    - Sony HVL-F20M 83–84, 234
    - Sony HVL-F32M 33–34, 83, 234, 236
    - Sony HVL-F43M 83–84, 235
    - Sony HVL-F45RM 235, 236
    - Sony HVL-F60M 84, 235
    - using older units with Sony shoe adapter, ADP-MAA 235
    - Yongnuo YN560-IV 235
  - External LCD monitor
    - Flysight RC801 HD 240
    - Sony model no. CLM-FHD5 239–240
  - External microphones
    - Rode VideoMic Pro 241
    - Sony ECM-CG50 241
    - Sony ECM-GZ1M 241
    - Sony ECM-W1M 240
    - Sony ECM-XYST1M 240
    - Sony XLR-K2M 241
    - UURig Quick Release L Plate, R006 241
  - External video recorder
    - Atomos Shogun 4K recorder 242
  - Eye AF option for control button 131–132
    - not available for movie recording 131
  - Eyepiece cup 147
  - Eye sensor 9, 147
  - Eye-Start AF menu item 70
    - available only with A-mount lenses 70, 231
- F**
- Face Detection Frame Display menu option 69
  - Face/Eye AF Settings menu item 68–69
  - Face/Eye Priority in AF menu option 68
    - incompatibility with other settings 69
  - Face Priority in Multi Metering menu item 78
  - Face Registration menu item 109
  - Fadeout
    - in-camera effect for movies 194–195
  - Fade to white
    - in-camera effect for movies 195
  - Fast-motion video
    - creating using S & Q Motion mode 208–209
  - FEL Lock Hold/Toggle options for control button 132–133
  - File Format (Movies) menu option 112, 196
  - File Format (Still Images) menu option 41–42
  - File Number menu item 187
  - Fill-flash setting 16, 80
  - Finder Color Temperature menu item 172
  - Finder Frame Rate menu option 122
  - Finder/Monitor menu item 122
  - Firmware
    - checking for updates 189
    - displaying version 189
    - version 2.00 189
  - Flash Compensation menu item 82–83
    - incompatibility with other settings 83
  - Flash exposure lock 132–133
  - Flashing highlights indicating overexposure 161
  - Flash Mode menu item 16, 80–82
  - Flash Off setting 16, 80
  - Flash pop-up button 8, 10, 147
  - Flash triggers and receivers 236–237
    - Hensel Strobe Wizard Plus 237
    - Sony Wireless Radio Commander, FA-WRC1M 84–85, 236
    - Sony Wireless Radio Receiver, FA-WRR1 84–85, 236
    - Yongnuo RF603N Radio Flash Trigger 237
  - Flash unit, built-in 8, 146
    - cannot be used until manually popped up 8, 15, 146
    - using diffuser with 244
  - Flexible Spot option for Focus Area 64–65, 244
    - ways to move focus frame on display 65
  - Focus Area Limit menu item 67
  - Focus Area menu item 62–67
  - Focus frame
    - changing location of 65
    - large frame when non-optical zoom in use 119
  - Focus Hold button
    - options that can be assigned to 137
  - Focus Hold option for control button 132
  - Focusing
    - general procedures for 14–15
    - setting priority on focus or release 62
    - using touch screen 15, 62–63
  - Focus Magnification Time menu item 61, 107
  - Focus Magnifier menu item 61, 106–107
    - assigning to a control button 107
    - compared to MF Assist option 61, 106
    - using touch screen features with 106
    - using when recording movies 107, 199, 212
  - Focus Mode menu item 14–15, 58–62
  - Focus ring on lens 11
  - Focus Standard option for control button 65, 130–131, 244
    - using during movie recording 207
  - Folder Name menu item 188
  - Follow Custom (Still Images) option for assignment to control

- button or control ring 137
- Format menu item 6, 186–187
- For Viewfinder display screen 121, 149
  - not available for video recording or in Movie mode 212
  - used with Quick Navi system 149–150
- Function button 9, 148–150
  - using to activate Send to Smartphone option 150, 217
  - using with Dial/Wheel Lock menu item 143–144, 150
  - using with Quick Navi system 149–150
- Function menu 148–149
  - assigning options to 139–140, 148, 150
  - using during movie recording 206
  - using to adjust settings 148–149
  - using to select Exposure Mode (Movies) settings 193
  - using to select Scene mode setting 30
  - using to select Superior Auto mode 22
- Function Menu Settings menu item 139–140, 148
- Function of Touch Operation menu item 63, 66–67, 142–143, 154

## G

- Gamma 103
- Gamma Display Assist menu item 102, 172–173
- GPS information. See Location information
- Grid Line menu item 124–125

## H

- Hand-held Twilight scene type setting 33
  - compared to Anti Motion Blur setting 33
- HDMI cable
  - using to connect camera to television set 228
- HDMI Information Display menu option 180
- HDMI port 10, 156
- HDMI Resolution menu item 180
- HDMI Settings menu item 180–182
- HDR (high dynamic range) photography 88, 89–91
- HDR setting in camera 90–91, 245
  - incompatibility with Raw format 91, 245
- Help system in camera 134
- High ISO Noise Reduction menu item 46
  - incompatibility with other settings 46
- Highlight option for Metering Mode 77, 78
- Histogram
  - displaying in playback mode 160–161
  - displaying in shooting mode 121

## I

- Icon on display when location information being obtained by camera 221
- Icons for menu items for still images or movies 40
- Icons showing function of control dial and control wheel 146
- Image Index menu item 168–169
- Image Jump Setting menu item 170
- Image sensor 10
  - cleaning 175–176
  - size of 1

- Image size
  - relationship to aspect ratio 43
- Imaging Edge Mobile app 216–221
- Imaging Edge Software 47, 55, 91, 93
  - using to control camera from computer 10, 115, 182–184, 245
  - using to process Raw images 42
  - where to download 3
- In-Camera Guide option for control button 134, 244
- Index screens of images 19, 158
- Infrared photography 226–227
- Infrared remote sensor 10, 157
- Initial Focus Magnification menu item 107
- Initial Focus Magnification (Movies) menu item 113, 199
- Intelligent Auto Mode 20–21
  - settings unavailable with 20
- Interlaced video formats 198
- Internal memory
  - lack of for Sony a6400 5
- Intervalometer
  - Vello Wireless ShutterBoss 239
- Interval Shooting Function menu item 54–55
  - creating time-lapse movie from shots 55
  - playback of images 55, 166, 169
- IR Remote Control menu item 180
  - incompatibility with other settings 180
- ISO
  - adjusting during movie recording 207
  - basic procedure for setting 27, 73–74
  - minimum setting of 500 for some Picture Profile settings 75, 104
  - Multi Frame Noise Reduction (MFNR) setting 74–75, 244
    - incompatibility with other settings 74
  - native settings 75
  - range of available settings 73–74
  - range of available settings for movies 205
  - setting minimum and maximum values for Auto ISO 74
- ISO Auto Minimum Shutter Speed menu item 76
- ISO menu item 73–75
  - incompatibility with other settings 75
- ISO Range Limit menu item 75–76
- ISO Setting menu item 27, 73–76

## J

- JPEG images 41
- JPEG Image Size menu item 43–44
- JPEG Quality menu item 43

## K

- Kelvin units of color temperature 85
- Key icon for protected image 162
- Knee 103–104

## L

- Landscape scene type setting 32
- Language menu item 7, 185



LCD monitor 9, 153–155  
 ability to tilt up, down, or 180 degrees forward 9, 153–154  
 adjusting brightness of 171–172  
 blacking out with Monitor Off display screen 121  
 resolution of 153  
 setting information display screens for 120–121  
 switching between LCD screen and EVF 122, 147  
 touch screen features of 9, 154–155, 244  
 turning on or off 176

Left button  
 options that can be assigned to 136

Lens Compensation menu item 46–47

Lens contacts 10

Lenses  
 A-mount lenses 230–231  
 attaching to camera 3, 157  
 E-mount lenses 229–230  
 focal length range of 117  
 Meike MK-6.5mm f/2 Circular Fisheye Lens for Sony E 230  
 “pancake” type 230  
 Sigma 16mm f/1.4 DC DN Contemporary Lens for Sony E 230  
 Sigma 35mm f/1.4 DG HSM Art Lens for Sony E 230  
 Sony DT 16-50mm f/2.8 SSM 230  
 Sony DT 50mm f/1.8 SAM 60, 116  
 Sony E 10-18mm f/4 OSS 25  
 Sony E 16mm f/2.8 230  
 Sony E 18-135mm f/3.4-5.6 OSS kit lens 11, 24, 33, 34–33, 49, 60, 117  
 minimum focus distance of 31  
 Sony E PZ 16-50mm f/3.5-5.6 OSS kit lens 32, 118, 119, 229  
 Sony E PZ 18-105mm f/4 G OSS 119, 230  
 Sony FE 50mm f/2.8 Macro 230  
 minimum focus distance of 31  
 Sony FE 85mm f/1.8 230  
 Sony FE 90mm f/2.8 Macro G OSS 230  
 Sony FE 100-400mm f/4.5-5.6 GM OSS 50, 117, 230

Lens mount 10, 157

Lens mounting index 10, 157

Lens release button 10

Level display screen 121  
 using for panorama shooting 36

Live View Display menu item 24, 26, 27, 86, 92, 125–126  
 forced to Setting Effect On in some shooting modes 126, 195, 212  
 using when using external flash units 126, 236

Location information  
 adding to images using Bluetooth connection 220–221  
 viewing 221

Location Information Link Settings menu item 221, 224, 225

Locking exposure 133

Locking focus 59

Long Exposure Noise Reduction menu item 45–46  
 incompatibility with other settings 46

## M

Macro scene type setting 31–32  
 using manual focus with 31–32

Magnifying focus area by tapping touch screen 155  
 during movie recording 206, 212

Manual exposure mode 26–29  
 using Auto ISO setting with 27, 28, 75, 245  
 using for HDR photography 29  
 using for silhouettes 29  
 using specific ISO setting with 27, 27–28  
 using with third-party flash units 29

Manual Exposure mode for movies 195  
 using Auto ISO with 195, 245

Manual focus 15, 60–62  
 focusing aids 60–61

Manual Shift feature 28

Marker Display menu item 114, 200

Marker Settings menu item 114, 201

Megapixels  
 used in measuring image size 43

Meike TTL Off-Camera Cord for Sony, MK-FA02 237

Memory cards  
 capacity for storing images and videos 5  
 formatting in camera 6  
 inserting into camera 6  
 micro SD cards 5  
 operating camera without card 4–5  
 Sony Memory Stick cards 5  
 inserting into camera 6  
 special requirements for XAVC S video formats 5, 192, 196, 197  
 types of 5

Memory menu item 56

Memory Recall mode 37–38, 243  
 recalling saved settings 56

Menu button 9, 39, 147–148  
 does not function during movie recording 212  
 using to return enlarged image to normal size 19, 147, 159

Menu items  
 dimmed because of conflicting settings 40  
 preceded by icons: Stills, Movies, S&Q 40

Menus  
 listing of 12, 39  
 navigating through 12, 39–40

Metering Mode menu item 76–78  
 incompatibility with other settings 77

MF Assist menu item 60–61, 108  
 compared to Focus Magnifier option 61, 106, 108  
 incompatibility with other settings 61, 108  
 not available for movies 212  
 using with DMF 108

MFNR (Multi Frame Noise Reduction) setting for ISO.  
 See ISO  
 incompatibility with other settings 74

Microphone, built-in 10, 157

Microphone port 10, 156

Microphones, external. See External microphones  
 Minimum shutter speed  
   setting for use with Auto ISO 76  
 M.M. icon for metered manual value 27  
 Mode dial 8, 145–146  
   effects of shooting mode on recording movies 202–203  
 Mode Dial Guide menu item 12, 29, 47, 56, 173, 193  
 Monitor Brightness menu item 171–172  
 Mophie PowerStation XL portable USB battery 234  
 Mount Adaptor for A-mount lenses 60, 230–231  
   incompatibility with some camera settings 231  
 Movie button 9, 151  
   limiting operation to Movie mode 143, 145–146, 151  
 Movie Button menu item 143, 145–146, 151, 202  
 Movie option for control button 134  
 Movie position on Mode dial  
   reasons for using 202–203  
 Movies  
   editing 19, 214  
   recording  
     adjusting sound level 199–200  
     basic procedure 17–18, 192  
     focus modes available for 206  
     functions that work from control buttons during video recording 207–208  
     summary of options for 211  
     time limits 18, 192  
     to external video recorder 196, 209–210  
 Movie w/Shutter menu item 114, 143, 145, 201–202  
 Multi Interface Shoe 8, 146  
 Multi option for Metering Mode 77  
 Multi port 10, 156  
   uses of 10, 156  
 My Dial options for control buttons 135–136  
 My Dial Settings menu option 8, 140–141, 152  
 My Menu 190–191  
   adding items to 190

## N

Network menu 221–225  
 New Folder menu item 188  
 NFC area on right side of camera 11, 156, 218  
 NFC (near field communication) protocol 156  
   using to connect camera to Android device 11, 217–218  
 Night Portrait scene type setting 33–34  
 Night Scene scene type setting 32–33  
 NO CARD warning message 4–5, 115  
 Noise Reduction Effect setting for MFNR 74  
 Non-drop-frame time code  
   selecting 179  
 Not Set option for control button 136  
 NTSC/PAL Selector menu item 175  
   effect on Record Setting menu options 175

## O

On/off switch 8, 145

Optical slave flash 235  
 Optical zoom 117  
 OSS (optical SteadyShot) designation for lens 115, 243  
 Overheating of camera 175

## P

Panorama  
   setting direction for 35  
 Panorama Direction menu item 35, 45  
 Panorama Size menu item 35, 45  
 Panoramas, playback 36  
 Panoramas, shooting 35–38  
 PC Remote setting for USB Connection 182–184, 245  
 PC Remote Settings menu item 115, 183, 184–185  
 Peaking Color menu item 61, 108  
 Peaking Display menu item 61  
 Peaking Level menu item 61, 108  
   using with DMF 109  
   using with MF Assist 108  
 Peaking Setting menu item 61, 108–109  
   using with DMF 61, 108  
 Phase-detection autofocus system  
   limits on compatible aperture settings 49  
 Photo Capture menu item 165, 210–211, 246  
 Photomatix software for HDR images 91  
 Picture Effect menu item 95–100  
   HDR Painting setting 98–99  
   High Contrast Monochrome setting 98  
   Illustration setting 100  
   incompatibility with other settings 95  
   Miniature Effect setting 99  
   Off setting 96  
   Partial Color setting 97–98  
     adjusting range of colors recognized 98  
   Pop Color setting 96  
   Posterization setting 96–97  
   Retro Photo setting 97  
   Rich-tone Monochrome setting 99  
   Soft Focus setting 98  
   Soft High-key setting 97  
   Toy Camera setting 96  
   using for movies 205  
   Watercolor setting 100  
 Picture Profile menu item 100–104  
   adjusting parameters for a Picture Profile 102–104  
   assigning to a control button for movie recording 102, 204  
   characteristics of 10 preset options 101  
   effect of setting on Raw images 104  
   incompatibility with other settings 104  
   minimum ISO setting of 500 for some settings 102  
   using S-Log or HLG settings for increased dynamic range in movie recording 101–102  
   using software to process footage taken using some profiles 245  
 Picture Profiles comparison chart 102  
 Playback

- images shot with continuous shooting 50
- movies
  - basic procedure 19, 213–214
  - changing volume 19, 173
- selecting still images or videos to view 167–168
- still images
  - basic procedures 18–19, 158
- Playback button 9, 150–151
  - does not function during movie recording 212
  - using to wake up camera after power save shutdown 150–151
- Playback menu 161–170
- Playback option for control button 136
- Playback speed for Interval Shooting menu item 166
- PlayMemories Home software 3, 19, 55
- Portrait scene type setting 30–31
- Power Save Start Time menu item 174–175
- Pre-AF menu item 58–59, 59, 70, 132
- Priority Set in AF-C menu item 62
  - effect on autofocus with continuous shooting 49, 62
- Priority Set in AF-S menu item 62
- Priority Set in Auto White Balance menu item 88
- Program Auto exposure mode for Movies 194
- Program mode 22–23
- Program Shift feature 8, 22–23
  - not available for movie recording 212
- Progressive video formats 197
- Protect menu item 161–162
- Proxy Recording menu item 113, 198
  - setting camera to transfer proxy or original movies by smartphone 222
- Pull focus effect for movie recording 155, 206
- PZ (power zoom) lens 116, 118, 119, 229

## Q

Quick Navi system 149–150

## R

- Rating menu item 163
- Rating Set (Custom Key) menu item 163–164
- Raw format for still images
  - correcting images taken with bad camera settings 41–42
  - incompatibility with other settings 42
  - in general 41–42
- Raw & JPEG option for File Format (Still Images) 42
- Rear Sync flash setting 81–82
- Recall Custom Hold options for control buttons 56–58, 130
- Recall menu item 56
- Rec Control menu item 181
- Record Setting menu item 112, 196–198
- Recover Image Database menu item 188
- Red Eye Reduction menu item 85
- Register Custom Shooting Settings menu item 56–58, 243
  - list of settings that can be registered for recall 57
- Registered AF Area + AF On option for control button 131
- Registered AF Area Hold option for control button 70, 131

- Registered AF Area Toggle option for control button 70, 131
- Registered faces
  - changing priority of 109
  - deleting 109
- Registered Faces Priority menu item 109
- Release without Card menu item 4, 115
  - effect in connection with tethered shooting 115
- Release without Lens menu item 115
- Remaining Images or Video Recording time
  - displaying 189
- Remote control devices
  - Sony RM-SPR1 wired remote 238
  - Sony RMT-DSLR1 180
  - Sony RMT-DSLR2 180, 238
    - using with Zoom menu item 117
  - Sony RMT-P1BT 189, 225, 238–239
    - using with Zoom menu item 117
  - Sony RMT-VP1K infrared remote 238
  - Sony RM-VPR1 wired remote 237
    - using with Zoom menu item 117
  - Sony shooting grip, VCT-SGR1 239
  - Vello Wireless ShutterBoss Intervalometer 239
- Remote control of camera from computer 182–184
- Remote control of camera from smartphone or tablet 218–220
- Reset Network Settings menu item 225
- Resetting camera settings 189–190
- Resolution of still images 43
- Right button
  - options that can be assigned to 137
- Right/Left Eye Select menu item 69
- Rotate menu item 162

## S

- Saturation
  - adjusting 92–93
- Saturation (Picture Profile parameter) 104
- Saving frame from movie in camera 165
- Saving settings with Memory Recall mode 37–38
- Scene mode 29–34
  - incompatibility with other settings 29
  - methods of selecting a scene type 29–30
- Scene recognition feature 20–21
- Scene Selection menu item 29–30, 47
- Select REC Folder menu item 187–188
- Self-portrait Timer menu item 111, 154
- Self-timer (Continuous) setting of drive mode 51, 244
  - incompatibility with other settings 51
  - using to take multiple shots 51
- Self-timer During Bracket menu option 53, 245
- Self-timer setting of Drive Mode 17, 50–51, 244
  - basic procedure for using 17, 51
  - incompatibility with other settings 51
  - using for closeup photography 51
  - using with exposure bracketing 51, 53, 245
- Sending Target menu item 222



- Send to Computer menu item 215–216, 222
  - Send to Smartphone Function menu item 216–217, 222
  - Send to Smartphone menu option
    - activating with Function button 9, 150, 217
  - Sensor plane indicator 8, 146–147
  - Set File Name menu item 187
  - Setting Reset menu item 189–190
  - Sharpness
    - adjusting 92–93
  - Shot Result Preview option for control button 135
  - Shutter Auto White Balance Lock menu item 105
  - Shutter button 8, 145
    - using to start and stop movie recording 201–202
  - Shutter Priority exposure mode for movies 194–195
  - Shutter Priority mode 25–26
  - Shutter speed
    - range of available settings 22, 24, 25, 28
    - range of available settings for movies 195
  - Silent Shooting menu item 114
    - incompatibility with other settings 114
  - Single exposure bracketing setting of Drive Mode 52–53
  - Single shooting setting for Drive Mode 17, 48
    - not available with Sports Action setting of Scene mode 48
  - Single-shot AF setting 14, 58–59
  - Slide Show menu item 167
    - incompatibility with other settings 167
  - Slow and Quick Motion Recording 208–209
  - Slow-motion video
    - creating using 60p or 120p setting for normal movies 197
    - creating using S & Q Motion mode 208
  - Slow Sync flash setting 33, 81
  - Smart Zoom 117–119
    - not available for movie recording 119
  - Smile Shutter menu item 109–110
    - incompatibility with other settings 110
  - Soft Skin Effect menu item 15, 104–105
    - incompatibility with other settings 104
  - Software for use with a6400 camera
    - where to download 3
  - Sony a6400 camera
    - features of 1
    - items supplied with in box 3
  - Sony Multi Terminal Connecting Cable, VMC-MM! 236
  - Sounds made by camera
    - silencing 114, 144
  - Speaker for sound from videos 156
  - Specify Printing menu item 164–165
  - Sports Action scene type setting 31
  - Spot AEL Hold option for control button 133
  - Spot AEL Toggle option for control button 133
  - Spot focus for movie recording 142, 155, 206
  - Spot Metering Point menu item 78
  - Spot option for Metering Mode 77
    - distinguishing spot circle from focus frame 77
    - linking spot circle to movable focus frame 78
  - Spotting scope, connecting camera to 227
  - S & Q Motion mode 208
  - S & Q Settings menu item 113, 198, 208–209
  - SSID/PW Reset menu item 224
  - SteadyShot menu item 115, 243
  - Step-by-step guides
    - adding location information to images 220–221
    - connecting with NFC 218
    - creating Slow & Quick Motion video recording 208–209
    - creating time-lapse movie from Interval Shooting Function shots 55
    - sending images to a computer 215–216
    - sending images to a smartphone 216–217
    - setting date, time, and language 7
    - taking pictures in Intelligent Auto mode 11–14
    - using Interval Shooting Function option 54–55
    - using smartphone as remote control for a6400 218–220
    - using Sony's Bluetooth remote control device 225
    - using Sony's light-based wireless flash system 84
    - using Sony's radio-based wireless flash system 84–85
  - Still images
    - cannot be captured in Movie or S & Q mode 146, 202, 210, 244
    - saving from movie files in camera 165, 210–211, 246
  - Street photography 225–226
    - extracting still frames from 4K video for 226
    - using tilting LCD screen for 225
  - Subject Detection menu item 68–69
    - incompatibility of animal eye detection with other settings 69
  - Subject Detection option for control button 132
  - Sunset scene type setting 32
  - Superior Auto Image Extraction menu item 22, 47–48
  - Superior Auto mode 15, 21–22, 47–48, 244
    - difference from Intelligent Auto mode 15, 21
    - extracting single images shot with 22, 47–48
    - incompatibility with other settings 22
  - Sweep Panorama mode 34–37
    - incompatibility with other settings 35, 36
    - using exposure compensation in 36
  - Switch Focus Area option for control button
    - using with Focus Area Limit option 67
  - Switch Right/Left Eye option for control button 132
  - Switch Vertical/Horizontal AF Area menu item 67–68
    - incompatibility with other settings 68
- ## T
- Tables and Lists
    - behavior of a6400 for video recording in various shooting modes 204
    - Camera Settings1 menu items that affect movies and can be adjusted for movie recording 205
    - functions that can be controlled during movie recording 207
    - number of images that fit on 64 GB memory card 44
    - possible assignments for button with Custom Key (Movies) option 137–138
    - possible assignments for button with Custom Key (Playback)

- option 138–139
- possible assignments for button with Custom Key (Still Images) option 128–129
- possible assignments for Function menu 139–140
- settings on a6400 for recording video to Shogun recorder 209
- suggested control assignments for movie recording 211
- suggested menu settings for recording movies in Movie mode 211–212
- suggested settings for Intelligent Auto Mode still images 13
- suggested settings for movies in Intelligent Auto mode 17
- suggested settings for panoramas 35
- TC Format menu item 179
- TC Make menu item 179
- TC Output menu item 181
- TC Preset menu item 179
  - using to reset time code 238
- TC Run menu item 179
- TC/UB Display Setting menu item 178–179
- TC/UB Settings menu item 177–179
- Telescope, connecting camera to 227
- Television set, playing images and videos on 228
- Tethered shooting 182–184, 245
- Tile Menu menu item 173
- Time code
  - in general 177–178
  - options for displaying and recording 178
  - procedure for resetting 238
  - setting for output through HDMI port 181
- Time-lapse photography 245
  - using external remote control device for 239, 245
  - using Interval Shooting Function menu item for 54, 245
  - using PC Remote option with Imaging Edge software for 184, 245
- Time zone
  - selecting 185–186
- Touch Focus menu item 63, 142, 154–155
  - incompatibility with other settings 142
  - using during movie recording 206
- Touch Operation menu item 154, 159, 176
- Touch Pad Settings menu item 155, 176–177
- Touch Panel/Pad Menu Item 176
- Touch Shutter menu item 142
  - incompatibility with other settings 142
- Touch Tracking menu item 66–67, 142–143, 155, 244
  - differences from Tracking option for Focus Area 66, 244
  - incompatibility with other settings 67, 143
- Tracking On option for control button 66, 131
- Tracking option for Focus Area 66–67
  - incompatibility with other settings 67
- Tripod socket 11, 157
- Tv notation for shutter speed 25

**U**

- UB Preset menu item 179
- UB Time Record menu option 179

- Up button. See Display button
- USB Connection menu item 182–184
- USB LUN Setting menu item 184
- USB Power Supply menu item 184
- User Bit option for movie recording 178
  - setting to display current time 179

**V**

- Version menu item 189
- Viewfinder. See Electronic viewfinder
- Viewfinder Brightness menu item 172
  - incompatibility with other settings 172
- VIEW icon on screen to indicate Setting Effect Off 126
- View Mode menu item 18, 167–168
  - changing setting from index or calendar screen 168
- View on TV menu item 222, 228
- Volume Settings menu item 173

## W

- WD TV Live media player 222
- White balance bracketing setting of drive mode 53
  - changing order of exposures 53–54
- White balance comparison chart 88
- White Balance menu item 85–88
  - adjusting setting using Raw software 87
  - adjusting setting with color axes 87, 244
  - available settings 86
  - fixed to Auto White Balance in Auto and Scene modes 87
- Wide option for Focus Area 63
- Wi-Fi Settings menu item 223–224
- Wind Noise Reduction menu item 114, 200
- Wireless Flash menu item 83–85
  - using Sony's light-based wireless flash system 83–84
  - using Sony's radio-based wireless flash system 84–85
- WPS Push menu item 223

## X

- XAVC S 4K format for movies 196
- XAVC S HD format for movies 196
- XAVC S video formats
  - special memory card requirements for 5, 192

## Z

- Zebra Setting menu item 122–124
  - saving custom settings 123–124
- Zone focusing 130
- Zone option for Focus Area 63–64
- Zoom menu option 116–117
  - assigning to a control button 116
  - using with remote control device 117
- Zoom ring on lens 11
- Zoom Ring Rotate menu item 119
- Zoom Setting menu item 117–119
  - incompatibility with other settings 119