

Index

Symbols

4K option for motion picture recording 124–125

A

AC adapter

connecting to camera 8

Nikon model EH-5b or 5c 152

Nikon Power Connector, model number EP-5C 152

inserting cord through channel in battery compartment door 152

using for interval time shooting 62

Accessory terminal 7, 78, 152

Active D-Lighting menu option 68–69

incompatibility with other settings 69

AE/AF Lock button 6, 79

controlling action of 112–113

using to lock focus or exposure during motion picture recording 120, 127

AE/AF Lock Button menu option 112–113

AEL (autoexposure lock)

using with motion picture recording 121

using with Time-lapse Movie setting 40

AF Area Mode menu option 12–13, 65–67

Face Priority option 65

Manual (Spot, Normal, or Wide) 65–66

Subject Tracking option 66

Target Finding option 67

AF Assist menu option 90, 109–110

AF assist/Self-timer/Red-eye reduction lamp 90

disabling 90, 109–110

Airplane Mode menu option 140

Aperture

procedure for setting 24

relationship to depth of field 22–23

Aperture Priority mode 22–24

Aperture values

available range of 7, 22

limited by focal length of lens 24

Aspect ratio 50–51

comparison images 51

relationship to Image Size setting 50

Assign Side Zoom Control menu option 7, 14, 77, 111–112

Atomos Shogun 4K video recorder 131

Auto Flash setting 84

Autofocus frame, movable 66

Autofocus Mode menu option (movies) 16, 120, 127–128

using AE/AF Lock button to lock focus 120

using Left button to force autofocus 120

Autofocus Mode menu option (still images) 67

Auto ISO setting

not available in Manual exposure mode 26, 64

Auto mode 19

incompatibility with other settings 19

Auto Off menu option 113

Auto with Red-eye Reduction flash setting 84

B

Back button focus 157–158

Backlighting/HDR setting 35–37

Battery charger

Anker 40-watt desktop USB charger 151

generic model for charging outside of camera 151

Mophie PowerStation XL portable USB battery 151

Nikon model number EH-73P

using to power camera while charging battery 3

using to power camera while recharging battery 151

Nikon model number MH-29 151

Battery/memory compartment door 8

flap for inserting cord from AC adapter 8

Battery, Nikon EN-EL20a 151

charging

length of time for full charge 4

using USB cable connected to computer 3, 4

using generic replacement 151

Beach setting 32

Bird-watching setting 28–29

selecting focal length for framing option 29

using continuous shooting with 28

Bluetooth menu option 137, 141–142

Blurred background

how to achieve 23–24, 144

Bokeh. See Blurred background

Bulb setting for shutter speed 26

C

Calendar screen in playback mode 92

Camera sounds

silencing 113

Cases

Crumpler 6 Million Dollar Home Bag 150

Lowepro Inverse 100 AW beltback 150

Lowepro Toploader 55 AW II Bag 150

Nikon Holster Bag 150

Charge by Computer menu option 115

Choose Connection menu option 134–135, 140, 153

Choose Key Picture menu option 102

Circulating series of squares on LCD screen

indicating camera writing data to memory card 5

Clean HDMI Output menu option 114

using to record video to external recorder 114

Clean HDMI video signal 7, 78, 114, 149

Close-up setting 34

Color temperature
 in general 54–55

Command dial 6, 80–81
 switching functions of with multi selector dial 80, 116
 using to adjust Peaking level 14, 117
 using to change enlargement factor in playback mode 80
 using to set shutter speed 21, 25

Comment
 creating and attaching to still images 115

Connection to Remote menu option 140–141, 153

Connect to Smart Device menu option 135, 140

Continuous menu option 58–62
 assigning to Function button 58

Continuous H: 60 fps 61

Continuous H: 120 fps 61

high-speed shooting 60

Interval timer setting 61–62
 compared to Time-lapse Movie setting 62

low-speed shooting 60

Pre-shooting Cache setting 60

single shots setting 60

turning off continuous shooting 60

unavailability of some settings 59

using self-timer with 59

Continuous shooting
 advantages of using 156
 in general 58
 playback of continuous shots 59–60

Contrast
 adjusting for images as they are shot 53

Control ring 7
 assigning an option to 90, 112
 using to adjust manual focus 14, 90

Control Ring Options menu option 7, 90, 112

Controls/items on bottom of camera 8–9

Controls on back of camera 6

Controls on front and sides of camera 7–8

Controls on top of camera 5–6

Copyright Information menu option 115–116

Creative mode 41–43
 comparison charts 42
 incompatibility with other settings 42
 list of settings 42–43
 making adjustments to settings 42
 selecting a setting for 41–42
 using for motion picture recording 120, 157

Cropping images in camera 92

Cross Screen setting for Filter Effects 98

Custom Picture Control menu option 54

Custom Picture Control menu option (movies) 130

Custom white balance
 how to set 55–56

D

Date and time
 imprinting on images 107–108

setting 8–9, 104–105

Date format
 setting 105

Date Stamp menu option 107–108

Delete/Trash button 6, 81–82
 using to delete images and videos 81–82

Depth of field 22–23

Digital Zoom menu option 110–111
 incompatibility with other settings 111

Dimmed items on menu screens 47–48

Diopter adjustment wheel 7, 77

Direction buttons
 in general 83

Display button 6, 79–80

Display screens
 playback mode 80, 92–93
 shooting mode 79–80

D-Lighting menu option 97

Dot Sight accessory
 Nikon DF-M1 153

Down button 86–87
 using to call up focus mode menu 86
 using to toggle manual focus magnification 14, 87, 88

Dusk/Dawn setting 33

Dynamic Fine Zoom feature 111

E

Easy Panorama setting 37
 dimensions of panoramic images 37
 scrolling panorama with OK button 37
 shooting taller panoramas 157

Electronic VR menu option 16, 128

Enlarging images in playback mode 92

EVF Auto Toggle menu option 6, 79, 107

EVF Options menu option 106

Exposure bracketing 64–65
 incompatibility with other settings 65
 using for HDR photography 37, 64

Exposure compensation
 activating with Right button 86
 procedure for using 14–15

Exposure Mode menu option (movies) 130

External flash units
 Godox TT685N 154
 Nikon SB-500 154
 Nikon SB-700 154
 Nikon SB-5000 154

External microphone jack 7, 78

External microphones
 adjusting sensitivity of 129
 Nikon ME-1 154–155
 Nikon ME-W1 154–155
 Rode VideoMic Pro 155

External Mic Sensitivity menu option 78, 129

External video recorder
 recording video to through HDMI port 114, 130–131

Eye sensor 6, 79

F

Faces

setting autofocus to detect 65

Fill Flash/Standard flash setting 84

Filter effects 97–99

adjusting for monochrome images as they are shot 53

Filter Effects menu option

using to add second effect to image 157

Filters

using with P1000 155

Fireworks Show setting 35

Firmware

checking for updates 118

Firmware Version menu option 118

Fisheye setting for Filter Effects 98

Flash, built-in 7, 76–77

diffusing 157

incompatibility with other settings 84, 87

Flash Exposure Compensation menu option 67–68

using to reduce harshness of flash 68

Flashing parts of image in playback mode 94

Flash mode menu 83–86

Flash pop-up switch 7

Flexible program feature 20

Focus

basic procedures for adjusting 11–14

locking 13

manual. See Manual focus

procedure with off-center subject 13

Focus frame

moving on display 66

Focus mode menu 11–12, 86–87, 146

unavailability of some settings in some shooting modes 86

Focus mode selector 6, 79

using with motion picture recording 120

Focus range of lens 146

Food setting 34–35

Format Card menu option 113–114

unavailable when wireless connection is active 114

Frame Rate menu option 15–16, 124, 129

Function button 6, 75–76

cannot be used during motion picture recording 123

changing option assigned to 76

incompatibility with other settings 76

settings that can be assigned to 75

G

Grid

displaying in shooting mode 80, 106

H

HDMI cable

using to connect camera to television set 149

HDMI menu option 114

HDMI Output menu option 114

HDMI port 7, 78

HDR (high dynamic range) photography 24, 35–37

using HDR setting of P1000 camera for 36–37, 156

Histogram

displayed when using exposure compensation 15

playback mode 93–94

shooting mode 80, 106–107

relationship to Manual Exposure Preview option 72

Hot shoe 6

HS (high-speed) movie options 125–127

unavailable when Clean HDMI Output is turned on 127

I

Image Comment menu option 115

Image Quality menu option 48–50

Image Review menu option 17, 105–106

Image Size menu option 50–51

Index screens in playback mode 91–92

Infinity focus modes 87

Infrared filter

Hoya R72 147

Infrared photography 147

Interval timer setting 61–62

compared to Time-lapse Movie setting 40, 62

location of files on memory card 61

ISO Sensitivity menu option 62–63

Auto setting 63

deciding on value to choose 62

Fixed Range Auto settings 63

incompatibility with other settings 64

listing of available values 63

Minimum Shutter Speed setting 64

negative effects of very high setting 63

procedure for making setting 63

using to enable use of fast shutter speed 63, 145

using with Manual exposure mode 26

ISO Sensitivity menu option (movies) 130

adjusting during motion picture recording 130

different range of values than for still shooting 130

J

JPEG images 48–50

K

Kelvins

as used to measure color temperature 54–55

L

Landscape setting 31

Language

setting 9, 114

Language menu option 114

LCD monitor

adjusting brightness and color of 106

- resolution of 89
- switching view by folding in against camera 77, 79, 89, 107
- switching view to and from 79, 107
- tilting and swiveling features of 89

Left button 87–88

- using to adjust manual focus magnification 13–14, 88
- using to call up self-timer/smile timer/ Pet Portrait Release menu 87
- using to cause camera to focus when recording video 88, 127

Lens

- specifications of 7, 146
- using superzoom capability of 142–145

Lens hood 3, 158

Level. See Virtual Horizon menu option

Location data

- adding to images using SnapBridge app 139

Location Data menu option 116, 139

- using Position option to display location data for image 116

M

Macro autofocus setting 146

Macro photography 34, 145–147

- using manual focus for 147

Manual exposure mode 24–26

- incompatibility with other settings 26
- procedure for making settings 25–26
- using to create HDR images 24

Manual Exposure Preview menu option 72–73

Manual focus 13–14

- adjusting magnification with 13–14
- reasons for using 13
- using autofocus with 14
- using Down button to toggle magnified screen 14
- using for macro photography 147
- using Left button to toggle enlargement factor 13–14

Mark for Upload menu option 96, 139

Memory card

- formatting 113
- inserting into camera 5
- need for high-speed card for highest-quality video formats 5
- number of images that can be stored 4
- operating camera without 4, 105
- types and capacities of 4–5

Menu button 6, 81

- using to save cropped version of image in playback mode 81

Menus

- listing of 46
- navigating through 46–48
- unavailable items on 48–49

Metering menu option 57–58

- incompatibility with Active D-Lighting setting 58

Microphone, built-in 6, 76

Miniature setting for Filter Effects 98

Minimum focus distance of lens 146

Mode dial 5, 75

Monitor button 79

- using to switch between LCD and viewfinder 6, 79

Monitor Options menu option 106

Monitor Settings menu option 105–107

Monochrome Picture Control setting 52

Moon setting 27–28

- selecting focal length for framing option 28

Motion picture recording

- exposure control 120
 - autoexposure lock 121
 - exposure compensation 121
- focus options 120, 127–128
- general procedure for 119–120
- limitations on length of recording 123–124, 125
- overview 119
- pausing with OK button 123
- quick guide 119
- slow-motion options 125–126
- speeded-up motion option 126–127
- still photo settings available 120–122
- taking still images during recording 122–123
- using exposure compensation 121
- using optical and digital zoom 122

Motion pictures

- editing in camera 132–133
 - not available when battery level is low 132
- editing with computer 18
- identifying on index screens in playback mode 131
- playback 131–132
 - in iTunes and on iPhones and other Apple devices 156
 - saving single frame from 133

Movie button 6, 80

Movie Manual menu 129–130

Movie Manual mode 129–130

Movie menu 15, 123–129

Movie Options menu option 16, 120, 124–127, 157

Moving subject

- tracking with autofocus 66

Multiple Exposure Lighten setting 39

- using for images of light trails or star trails 39

Multiple Exposure menu option 69–70

Multi selector dial 6, 82

- switching functions with command dial 82, 116
- using to adjust manual focus 14
- using to set aperture value 24, 25, 82

N

Network menu 140–142

Network Settings menu option 141

Neutral density filter 157

Neutral Picture Control setting 52

Night Landscape setting 33–34

Night Portrait setting 32

Nikon Capture NX-D software

- using to process Raw images 49
- where to download 3

Nikon Coolpix P1000 camera
 advantages of 1
 items that come in the box 3
 new features of 1

Nikon Movie Editor software 132

Nikon Reference Manual for Coolpix P1000
 where to download 3

Nikon ViewNX-i software
 where to download 3

No card present error message 4

Noise Reduction Filter menu option 68

NTSC video system 16, 124

O

OK button 82
 functions of 82

P

Painting setting for Filter Effects 98–99

PAL video system 16, 124

Panorama photography. See Easy Panorama setting

Party/Indoor setting 32

Peaking feature for manual focus 14, 117
 adjusting level with command dial 117

Peaking menu option 117–118

Pet Portrait Auto Release feature 38, 88

Pet Portrait setting 38

Photo Illustration setting for Filter Effects 99

PictBridge printer 103

Picture Control menu option 52–54
 adjustments to settings 53–54
 comparison chart 52
 saving custom settings 54
 using with motion picture recording 120

Picture Control menu option (movies) 130

Playback button 6, 78
 using to turn on camera 78

Playback menu 95–102
 need to have camera in playback mode to get access 95

Playback of images and videos 17–18
 calendar screen 92
 checking tone levels of images 94
 continuous burst of shots 17, 59–60, 94–95
 choosing key picture for 102
 displaying as individual images 95, 102
 cropping image with Menu button 92
 enlarging image 17, 92
 general procedures 17, 91
 index screens 91–92
 motion pictures 17–18, 131–132

Portrait (Color + B&W) setting for Filter Effects 99

Portrait setting 30–31

Power button 6, 74

Power saving mode. See Auto Off menu option

Printing images 102–103

Print menu 103

Program mode 20

Protect menu option 100

Q

Quick Retouch menu option 96–97

R

Raw + Fine and Raw + Normal settings 49–50

Raw format for images 48–50
 advantages and disadvantages of 49
 compared to JPEG format 48–49
 incompatibility with other settings 49, 50
 using to adjust shooting settings after the fact 49

Rear-curtain Sync flash setting 85–86

Remote control of camera
 using SnapBridge app 138

Remote control units
 Nikon MC-DC2 Remote Cord 152
 Nikon ML-L7 Remote Control 140–141
 Nikon WR-R10 and WR-T10 Wireless Remote Controllers
 152–153

Reset All menu option 118
 using to help resolve conflicts among camera settings 48

Reset File Numbering menu option 116–117

Reset User Settings menu option 45, 71

Resolution of images 50

Restore Default Settings option on Network menu 142

Right button 86
 using for autofocus in manual focus mode 14, 86
 using for exposure compensation 86
 using to lock exposure when recording video 86, 120

Rotate Image menu option 101

S

Saturation
 adjusting for images as they are shot 53

Save User Settings menu option 44, 70

Scene Auto Selector 30

Scene modes
 in general 26–27

SCENE setting on mode dial 27, 29–41
 incompatibility with other settings 30
 listing of scene types 27

SD cards. See Memory card

Sekonic C-700 color meter 56

Selective Color setting 38–39

Selective Color setting for Filter Effects 97–98

Self-timer
 controlling whether it remains set 108, 158
 general procedure for using 87
 using to avoid camera shake 157
 using with continuous shooting options 59, 87
 using with motion picture recording 88, 121

Self-timer/AF Assist/Red-eye Reduction lamp 7

Self-timer: After Release menu option 108, 158

Send While Shooting menu option 137, 139, 141

Sequence Display Options menu option 95, 102

Sharpening
adjusting for images as they are shot 53

Shooting modes
names of 19

Shutter Priority mode 20–22

Shutter release button 5, 74
operating when no memory card in camera 105

Shutter speed
procedure for setting 21–22
range of available settings 20–21, 22, 26
limitations when using Continuous menu option 22, 59

Shutter Speed Equivalents 22

Side zoom control 7, 77, 111–112
assigning to manual focus 14, 77, 112
using for telephoto shots 77, 145
using with motion picture recording 120

Skin Softening menu option 97

Slide Show menu option 99–100

Slot Empty Release Lock menu item 4, 105

Slow Sync flash setting 85

Small Picture menu option 101

Smile timer 88
incompatibility with other settings 87

Snap-back zoom button 7, 77, 112
not available for use when recording movies 78
using for telephoto shots 77

Snap-back Zoom menu option 77, 112

SnapBridge app
overview of use 134
summary of options for transferring images and videos 139–140
using for image transfer and remote control of camera 134–140

Snow setting 32–33

Soft Portrait setting for Filter Effects 97

Soft setting 38

Sound Settings menu option 113

Speaker
location of 6

Sports setting 31–32

Standard Picture Control setting 52

Standby mode 74

Startup Zoom Position menu option 71–72, 75

Step-by-step tutorials
basic picture-taking 10
motion picture recording 15–16
quick guide to motion picture recording 119
recording to an external video recorder 131
remote control of camera using SnapBridge app 138
setting up SnapBridge connection and transferring images by Bluetooth 134
using SnapBridge to transfer images and videos by Wi-Fi 137

Still images
taking during motion picture recording 122–123

Street photography 148–149

Sunset setting 33

Superlapse Movie setting 40–41

T

Tables
fractional shutter speed equivalents 22
limits on shutter speed settings 21

Television set
connecting camera to 149

Time-lapse Movie setting 40

Time-lapse photography 40, 61–62

Time setting for shutter speed 26

Time zone
changing for travel 105
setting 105

Time Zone and Date menu option 8–9, 104–105

Toggle Av/Tv Selection menu option 80, 82, 116
using to switch functions of command dial and multi selector dial 116

Tone levels in image, checking 94

Toning
adjusting for monochrome images as they are shot 53

Tripod socket 8

U

UHD (ultra-high definition) motion picture recording. See 4K option for motion picture recording

UHS-3 speed class for memory cards
requirement to use card of that speed for high-quality video formats 5

Up button
using to call up flash mode menu 83

USB port 7
uses of 78

User Settings mode 43–45
list of settings that can be saved 44–45

V

Vibration Reduction menu option 108–109
using with long telephoto shots 144
using with motion picture recording 121–122

Video recording. See Motion picture recording

Viewfinder 6, 79
adjusting brightness and color of 106
switching view by folding LCD screen in against camera 107
switching view to and from 107

View/Hide Framing Grid menu option 106–107

View/Hide Histograms menu option 106–107

Vignette setting for Filter Effects 99

Virtual Horizon menu option 107

Vivid Picture Control setting 52

Volume
adjusting for motion picture playback 17

W

- White balance comparison chart 57
- White balance menu option 54–57
 - Choose Color Temperature setting 56
 - list of available settings 55
 - making adjustments to preset settings 55
 - Preset Manual setting
 - using to set custom white balance 55–56
 - using with motion picture recording 120
- White balance menu option (movies) 130
- Wi-Fi menu option 141
- Wind Noise Reduction menu option 128

Z

- Zone focusing 157
- Zoom lens
 - flattening of subjects into single plane 143
 - haze effect from compression of atmosphere 143
 - isolating subject through telephoto shot 143
 - rule of thumb for choosing shutter speed for telephoto shots 144–145
 - shallow depth of field at telephoto settings 144
 - using telephoto power of 142–145
 - ways to avoid image blur at telephoto settings 144
- Zoom lever 5–6, 75
- Zoom Memory menu option 71–72, 75
 - not applicable to side zoom control 72, 77
- Zoom Microphone menu option 16, 128
- Zoom scale
 - not displayed during motion picture recording 121