

Contents

Introduction	1
CHAPTER 1: PRELIMINARY SETUP	3
Setting Up the Camera	3
Charging and Inserting the Battery	3
Inserting the Memory Card.	4
Introduction to Main Controls	5
Top of Camera	5
Back of Camera	6
Front and Left Side of Camera	7
Bottom of Camera	8
Setting the Date, Time, and Language	8
CHAPTER 2: BASIC OPERATIONS	10
Fully Automatic—Auto Mode	10
Basic Variations from Fully Automatic.	11
Focus	11
Manual Focus	13
Exposure	14
Exposure Compensation	14
Motion Picture Recording.	15
Viewing Pictures and Movies	17
Review While in Shooting Mode	17
Reviewing Images in Playback Mode	17
Playing Movies	17
CHAPTER 3: THE SHOOTING MODES	19
Auto Mode	19
Program Mode	20
Shutter Priority Mode	20
Aperture Priority Mode	22
Manual Exposure Mode	24
Scene Modes.	26

Moon	27
Bird-watching	28
The SCENE Setting on the Mode Dial	29
Scene Auto Selector	30
Portrait	30
Landscape	31
Sports	31
Night Portrait	32
Party/Indoor	32
Beach	32
Snow	32
Sunset	33
Dusk/Dawn	33
Night Landscape	33
Close-up	34
Food	34
Fireworks Show	35
Backlighting/HDR	35
Easy Panorama	37
Pet Portrait	38
Soft	38
Selective Color	38
Multiple Exposure Lighten	39
Time-lapse Movie	40
Superlapse Movie	40
Creative Mode	41
User Settings Mode	43

CHAPTER 4: THE SHOOTING MENU

46

Image Quality	48
Image Size	50
Picture Control	52
Standard	52
Neutral	52
Vivid	52
Monochrome	52
Adjustments to Picture Control Settings	53
Custom Picture Control	54
White Balance	54
Metering	57
Continuous Shooting	58
ISO Sensitivity	62
Minimum Shutter Speed	64
Exposure Bracketing	64
AF Area Mode	65
Face Priority	65
Manual (Spot, Normal, or Wide)	65
Subject Tracking	66
Target Finding AF	67
Autofocus Mode	67
Flash Exposure Compensation	67
Noise Reduction Filter	68
Active D-Lighting	68
Multiple Exposure	69
Save User Settings	70
Reset User Settings	71

Zoom Memory and Startup Zoom Position 71
 Manual Exposure Preview 72

CHAPTER 5: PHYSICAL CONTROLS 74

Power Button 74
 Shutter Release Button 74
 Mode Dial 75
 Zoom Lever 75
 Function Button 75
 Flash Pop-up Switch 76
 Diopter Adjustment Wheel 77
 Side Zoom Control 77
 Snap-back Zoom Button 77
 Playback Button 78
 AE/AF Lock Button 79
 Focus Mode Selector 79
 Viewfinder, Monitor Button and Eye Sensor 79
 Display Button 79
 Movie Button 80
 Command Dial 80
 Menu Button 81
 Delete/Trash Button 81
 Multi Selector and its Buttons and Dial 82
 Multi Selector Dial 82
 OK Button 82
 Direction Buttons 83
 Up Button: Flash Settings 83
 Right Button: Exposure Compensation 86
 Down Button: Focus Mode 86
 Left Button: Self-timer; Smile Timer; Pet Portrait Release 87
 Tilting and Swiveling LCD Monitor 89
 AF Assist/Self-timer/Red-eye Reduction Lamp 90
 Control Ring 90

CHAPTER 6: PLAYBACK 91

Normal Playback 91
 Index Views, Calendar View, and Enlarging Images 91
 Playback Display Screens 92
 Viewing Shots Taken in a Sequence 94
 The Playback Menu 95
 Mark for Upload 96
 Quick Retouch 96
 D-Lighting 97
 Skin Softening 97
 Filter Effects 97
 Slide Show 99
 Protect 100
 Rotate Image 101
 Small Picture 101
 Sequence Display Options 102
 Choose Key Picture 102
 Printing Images 102
 Printing Directly from the Camera 103

CHAPTER 7: THE SETUP MENU

104

Time Zone and Date	104
Slot Empty Release Lock	105
Monitor Settings	105
EVF Auto Toggle	107
Date Stamp	107
Self-timer: After Release	108
Vibration Reduction	108
AF Assist	109
Digital Zoom	110
Assign Side Zoom Control	111
Snap-back Zoom	112
Control Ring Options	112
AE/AF Lock Button	112
Sound Settings	113
Auto Off	113
Format Card	113
Language	114
HDMI	114
Charge by Computer	115
Image Comment	115
Copyright Information	115
Location Data	116
Toggle Av/Tv Selection	116
Reset File Numbering	116
Peaking	117
Reset All	118
Firmware Version	118

CHAPTER 8: MOTION PICTURES

119

Movie-making Overview	119
Quick Guide to Recording a Movie Clip	119
Other Settings for Movies	120
Recording Movies in Still-Shooting Modes	120
White Balance, Picture Control, and Creative Mode Options	120
Focus and Focus Lock	120
Exposure, Exposure Compensation, and Exposure Lock	121
Self-timer	121
Vibration Reduction	121
Zoom	122
Taking Still Images During Movie Recording	122
Pausing Recording with the OK Button	123
Fn Button: Does Not Operate During Video Recording	123
The Movie Menu	123
Frame Rate	124
Movie Options	124
HS (High-Speed) Movie Options	125
Autofocus Mode	127
Electronic VR (Vibration Reduction)	128
Wind Noise Reduction	128
Zoom Microphone	128
Frame Rate	129
External Microphone Sensitivity	129
Movie Manual Mode	129
Movie Manual Menu	130

Exposure Mode	130
Picture Control and Custom Picture Control	130
White Balance.	130
ISO Sensitivity.	130
Recording to an External Video Recorder.	130
Movie Playback and Editing.	131
Playback.	131
Editing.	132

CHAPTER 9: SNAPBRIDGE APP, SUPERZOOM LENS, AND OTHER TOPICS 134

SnapBridge App	134
Initial Connection and Transferring Images from Camera to Smart Device	134
Remote Control of Camera Using SnapBridge App.	138
Adding Location Data to Images.	139
Summary of Options for Transferring Images and Movies to a Smart Device Wirelessly	139
The Network Menu	140
Airplane Mode	140
Choose Connection	140
Connect to Smart Device.	140
Connection to Remote	140
Send While Shooting	141
Wi-Fi	141
Bluetooth	141
Restore Default Settings	142
Using the Superzoom Lens	142
Macro (Closeup) Photography	145
Infrared Photography	147
Street Photography	148
Connecting to a Television Set	149

APPENDIX A: ACCESSORIES 150

Cases	150
Batteries and Chargers	151
AC Adapter.	152
Remote Controls.	152
Dot Sight	153
External Flash	154
External Microphones	154
Filters.	155

APPENDIX B: QUICK TIPS 156

APPENDIX C: RESOURCES FOR FURTHER INFORMATION 159

Photography Books	159
Digital Photography Review	159
Reviews of the Coolpix P1000.	159
The Official Nikon Site.	159
Photography Information	160