

Contents

INTRODUCTION	1
CHAPTER 1: PRELIMINARY SETUP	3
Charging and Inserting the Battery	3
Choosing and Inserting a Memory Card	4
Setting the Language, Date, and Time	7
CHAPTER 2: BASIC OPERATIONS	9
Introduction to Main Controls	9
Top of Camera	9
Back of Camera	9
Front of Camera	10
Right Side of Camera	10
Left Side of Camera	10
Bottom of Camera	11
Taking Pictures in Auto Mode	11
Variations from Fully Automatic	13
Photo Creativity Feature	13
Flash	16
Drive Mode: Self-Timer and Continuous Shooting	17
Overview of Movie Recording	17
Viewing Pictures	19
Reviewing While in Shooting Mode	19
Reviewing Images in Playback Mode	19
Playing Movies	19
CHAPTER 3: SHOOTING MODES	21
Intelligent Auto Mode	21
Superior Auto Mode	22
Program Mode	23
Aperture Priority Mode	24
Shutter Priority Mode	26

Manual Exposure Mode	27
Scene Mode	30
Portrait	32
Advanced Sports Shooting.	32
Landscape.	33
Sunset	33
Night Scene	33
Hand-Held Twilight	34
Night Portrait	34
Anti Motion Blur	34
Pet	35
Gourmet.	35
Beach	35
Snow	36
Fireworks	36
Soft Skin.	36
High Sensitivity	36
iSweep Panorama Mode.	37
Memory Recall Mode	39

CHAPTER 4: SHOOTING MENU

41

Image Size	43
Aspect Ratio	45
Quality	46
Panorama Size and Panorama Direction	46
File Format	47
Record Setting	47
Drive Mode.	47
Single Shooting.	48
Continuous Shooting.	48
Self-Timer	49
Self-Timer (Continuous)	49
Continuous Exposure Bracketing	49
Single Exposure Bracketing	50
White Balance Bracketing	50
DRO Bracketing	51
Bracket Settings	51
Flash Mode.	52
Flash Off.	52
Autoflash	52
Fill-Flash	52
Slow Sync	53
Rear Sync	53
Flash Compensation.	54
Red Eye Reduction.	55
Focus Mode (Available as Menu Option on HX90V Only)	55
Single-Shot AF	55
Continuous AF	56
DMF (HX90V Only)	57
Manual Focus (HX90V Only)	57
Focus Area	59
Wide.	59
Center	59
Flexible Spot	60
Expand Flexible Spot	61
AF Illuminator	61

- Exposure Compensation 61
- ISO 62
 - Multi Frame Noise Reduction 63
- Metering Mode 64
- White Balance 65
- DRO/Auto HDR 68
- Creative Style 71
 - Adjusting Contrast, Saturation, and Sharpness 71
 - Standard 72
 - Vivid 72
 - Portrait 72
 - Landscape. 73
 - Sunset. 73
 - B/W 73
 - Sepia. 73
- Picture Effect. 73
 - Off 74
 - Toy Camera 74
 - Pop Color 75
 - Retro Photo 76
 - Soft High-Key 76
 - Partial Color 76
 - High Contrast Monochrome 77
 - Soft Focus 77
 - HDR Painting 77
 - Rich-Tone Monochrome 78
 - Miniature Effect. 78
 - Watercolor 79
 - Illustration. 79
- Focus Magnifier (HX90V only). 79
- High ISO Noise Reduction. 81
- Center Lock-on AF. 81
- Smile/Face Detection 81
 - Face Detection On (Registered Faces) 81
 - Face Detection On 82
 - Smile Shutter 82
- Soft Skin Effect. 83
- Auto Object Framing 83
- Scene Selection 84
- Movie. 84
- SteadyShot (Movies). 84
- Auto Slow Shutter, Micref Level, and Wind Noise Reduction 84
- Shooting Tip List. 85
- Memory Recall 85
- Memory 85

CHAPTER 5: PHYSICAL CONTROLS

- Mode Dial 87
- Shutter Release Button 87
- Zoom Lever 87
- Power Button 88
- Built-in Flash and Flash Pop-up Switch 88
- Electronic Viewfinder 88
- AF Illuminator/Self-Timer Lamp. 89
- Control Ring (HX90V Only) 90
- Playback Button 91

Movie Button	91
Menu Button	91
Function Button	92
Shooting Mode: Function Menu	92
Quick Navi System	93
Playback Mode: Send to Smartphone	94
In-Camera Guide/Delete Button	94
Control Wheel and Its Buttons	96
Control Wheel.	96
Center Button.	97
Direction Buttons.	97
Up Button: Display.	97
Right Button: Flash Mode	97
Down Button: Photo Creativity/Exposure Compensation	98
Exposure Compensation	98
Left Button: Self-Timer/Drive Mode	100
Tilting LCD Screen	100
Ports and Other Items on Sides and Bottom of Camera	101

CHAPTER 6: PLAYBACK AND PRINTING

103

Normal Playback.	103
Index View and Enlarging Images.	103
Playback Screens.	105
Deleting Images with the Delete Button	106
Playback Menu.	106
Delete	107
View Mode	108
Image Index.	108
Display Rotation	109
Slide Show	109
Rotate	110
Enlarge Image.	111
4K Still Image Playback	111
Protect.	111
Motion Interval Adjustment	111
Specify Printing	112
Beauty Effect	113

CHAPTER 7: CUSTOM AND SETUP MENUS

114

Custom Menu	114
Zebra	114
MF Assist (HX90V Only).	115
Focus Magnification Time (HX90V Only).	115
Grid Line.	116
Rule of Thirds Grid	116
Square Grid	116
Diagonal Plus Square Grid.	117
Marker Display	117
Marker Settings	117
Auto Review.	118
Display Button	119
Peaking Level (HX90V Only)	121
Peaking Color (HX90V Only)	122
Exposure Settings Guide	122
Zoom Speed	122

Zoom Setting	123
Finder/Monitor	126
Release without Card	126
Self-portrait Timer	127
Face Registration	127
Write Date	128
Function Menu Settings	128
Custom Key Settings	129
Control Ring (HX90V Only)	130
Center Button	131
Standard	132
MOVIE	132
Download Application	132
Not Set	132
Left Button	133
Right Button	133
Down Button	133
In-Camera Guide Button	133
Zoom Function on Ring (HX90V Only)	133
Movie Button	134
Setup Menu	134
Monitor Brightness	135
Viewfinder Brightness	135
Finder Color Temperature	135
Volume Settings	135
Audio Signals	136
GPS Settings (HX90V Only)	136
GPS On/Off	136
GPS Auto Time Correction	137
GPS Area Adjustment	137
Use GPS Assist Data	137
GPS Log Recording	137
Upload Settings	138
Tile Menu	138
Mode Dial Guide	139
Delete Confirmation	139
Display Quality	140
Power Save Start Time	140
NTSC/PAL Selector (Cameras Sold in Europe and Other PAL Areas Only)	140
Function for VF Close	141
Demo Mode	141
HDMI Settings	141
HDMI Resolution	142
24p/60p Output	142
HDMI Information Display	142
CTRL for HDMI	143
USB Connection	143
USB LUN Setting	143
USB Power Supply	144
Language	144
Date/Time Setup	144
Area Setting	145
Format	145
File Number	146
Select REC Folder	146
New Folder	146
Folder Name	147

Recover Image Database	147
Display Media Information	147
Version	148
Setting Reset	148

CHAPTER 8: MOTION PICTURES

150

Movie-Making Overview	150
Details of Movie Settings	150
Movie-Related Shooting Menu Options	151
File Format	151
XAVC S HD.	151
AVCHD.	151
MP4	151
Record Setting	151
XAVC S HD.	152
AVCHD.	152
60i and 60p Video Formats	152
24p Video Formats.	153
MP4	153
Movie (Exposure Mode)	153
Program Auto	154
Aperture Priority	154
Shutter Priority	155
Manual Exposure	155
SteadyShot (Movies)	156
Auto Slow Shutter	157
Micref Level	158
Wind Noise Reduction	158
Effects of Mode Dial Position on Recording Movies	158
Effects of Other Shooting Menu Settings on Recording Movies	160
Effects of Physical Controls When Recording Movies	161
Summary of Options for Recording Movies	163
Other Settings and Controls for Movies	164
Movie Playback	164
Motion Shot Feature	165
Editing Movies	166

CHAPTER 9: WI-FI, APPLICATIONS, AND OTHER TOPICS

168

Connections Using Wi-Fi and NFC	168
Sending Images to a Computer	168
Sending Images to a Smartphone	170
Connecting with NFC.	172
Using a Smartphone or Tablet as a Remote Control	173
Wi-Fi Menu	176
Send to Smartphone	176
Send to Computer	176
View on TV	177
One-touch (NFC)	177
Airplane Mode	178
WPS Push	178
Access Point Settings.	178
Edit Device Name.	179
Display MAC Address.	179
SSID/PW Reset	179
Reset Network Settings.	179

Applications and Application Menu 180

Other Topics 181

 Using the Superzoom Lens. 181

 Macro Photography 184

 Street Photography. 185

 Connecting to a Television Set. 186

APPENDIX A: ACCESSORIES **187**

Cases 187

Batteries and Chargers 188

Remote Controls. 189

External Flash and LED Light 191

External Video Recorder. 192

External Audio Recorder. 192

Tripods 193

APPENDIX B: QUICK TIPS **194**

APPENDIX C: RESOURCES FOR FURTHER INFORMATION **196**

Books. 196

Websites and Videos. 196

 Digital Photography Review 196

 Reviews of the HX80 and HX90V. 196

 The Official Sony Site 197

 Other Resources 197

Index **198**